



# INSTALLATION INFORMATION EMG Model: EMG-KFK Set Kerry King Set

SPECIFICATIONS:	MODEL:		MODEL:	
Preferred Pickup Placement Logo Color Magnet Type Resonant Frequency (KHz) Output Voltage (String) Output Voltage (Strum) Output Noise @ 60Hz Output Impedance (Kohm) Current@ 9V (Microamps) (System) Battery Life (Hours) (System) Maximum Supply (Volts DC) Note: Magnet Type: A (Alnico) C/S (Ceramic/Steel)	<b>81</b> Bridge Silver C/S 2.00 2.0 4.5 -91 10 160 1500 27	<b>85</b> Neck Gold Alnico 2.45 2.1 4.5 -89 10	<b>PA2</b> Input Impedance (Ohms) Output Noise@ 60Hz Output Noise(Spectral) Output Impedance (Ohms) Current@ 9V (Microamps) Battery Life (Hours) Maximum Supply (Volts DC)	500K -91 dbV -130 dbV 2K 290 1725 27

#### **IMPORTANT INSTALLATION NOTES:**

- 1) Only one battery is required for the pickups, and any active accessories such as the SPC, RPC, EXG, AB, PA-2, and Pi-2.
- 2) Use an Alkaline or Lithium battery for longest life.
- The controls included with EMG Systems are 25K Ohm, Audio Taper. This value of control is required for the system to work correctly.
- 4) When installing EMG Active Pickups, DO NOT connect the bridge ground wire. This wire is usually soldered to a volume or tone control casing and goes to the bridge. This wire grounds the strings and uses them and your body as a shield against hum and buzz. It also creates a shock hazard. EMG Pickups are

shielded internally and DO NOT require string grounding. This greatly reduces the possibility of reverse polarity shock from microphones and other equipment

- 5) EMG Active Pickups have very little magnetism compared to passive pickups. We recommend you adjust the pickups as close to the strings as possible. Sustain and string movement will not be inhibited by close adjustment.
- 6) If your installation is different from the diagrams in these instructions or you need additional diagrams visit our website: emgpickups.com for a complete listing of available diagrams.



### Warranty:

All EMG Pickups and accessories are warranted for a period of two years. This warranty does not cover failure due to improper installation, abuse or damage. If at any time a pickup fails to work, return it postage prepaid with proof of purchase. Warranty replacement products are covered by this same warranty. This warranty covers only those pickups and accessories sold by authorized EMG Dealers. This warranty is not transferable.

## Installation Instructions: EMG Model: PA-2

- 1) The PA-2 requires a 1/4 inch hole (6.2mm) and the bushing length is 5/16 inches long (8mm). Optimum control compartment body thickness is less than 1/4 inch.
- 2) The PA-2 features EMG's 5 pin Quik-Connect system plug for ease of installation and it allows you to exchange other EMG Accessory Circuits in it's place. The EMG 5 pin connector always uses the following legend for hook-up.

#### Wire Legend:

Red	Supply Voltage +9/+18/+27
Green	Output of PA-2
Black	Ground
Black	Ground #2 for convenience
White	Input to PA-2

3) Install the PA-2 in the guitar and then follow the diagram(s) on this sheet that best fit your installation.

The diagrams shown are for EMG Active Pickups only. All diagrams show the Red Wire coming from the pickups connected to the battery. If you are installing EMG-HZ Passive Pickups refer to those diagrams. The Red Wire of the HZ Pickup is NOT for battery power, it is a coil wire.

