

# QUICK START USER GUIDE




## Wi AudioStream™ Pro

DIGITAL WIRELESS  
((STEREO))™

[www.widigitalsystems.com](http://www.widigitalsystems.com)


# Charging

1. Plug the AC Charger into a power socket.
2. Connect the USB Y-Split power cable to the USB port on the AC Charger.
3. Connect one of the two mini USB connectors into the transmitter USB port.
4. Connect the second mini USB connector into the receiver USB port.
5. The Power/Status LED will turn to solid Red ON.
6. When charging is complete the Red LED will turn OFF.
7. Remove the charging cable and the AC Charger and store in the carrying case. The battery will last 4 to 6 hours of continuous operation.

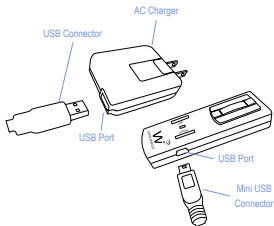

## Pairing (Only If Needed)

1. First turn ON the transmitter (Tx) and the receiver (Rx) units by pressing and holding the POWER button ②, ② on each of the units for 2 seconds.
2. Press and hold the LINK button ⑦ on the transmitter (Tx) for 3 seconds. The Power/Status LED on the transmitter will start fast flashing. The transmitter is now in a Pairing mode and ready to search for the receiver.
3. Press and hold the LINK button ⑥ on the receiver (Rx) for 3 seconds. The Power/Status LED on the receiver will start fast flashing. The receiver is now in a Pairing mode and ready to be found by the transmitter.
4. Once the transmitter links with the receiver the Power/Status LED on both devices will turn to solid Green.

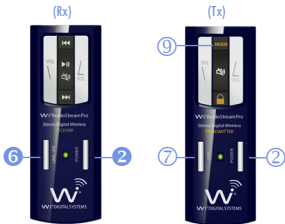


# Wireless Microphone Setup

## PLEASE READ FIRST

Set Transmitter to **Mono Mic-in Mode ⑨** (fast blue LED flashing) for operation with ear worn microphones. Refer to back of transmitter for additional information.



 
## Transmitter Connection




Always route the audio cable beneath Tx & Rx belt clip to prevent accidental disconnection.

## Receiver Connection

 Sound System Application



Recording to your Computer

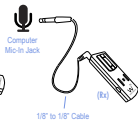

# In-Ear Monitoring Setup

 
## PLEASE READ FIRST

Set Transmitter to **Line-in Stereo Mode** ⑨ (two blue LED flashes) for operation with earphones. Refer to back of Transmitter for additional information.




## Transmitter Connection

Stage Monitoring



Music Listening from Computer

 

## Receiver Connection



Always route the audio cable beneath Tx & Rx belt clip to prevent accidental disconnection.

# QUICK START USER GUIDE



**Wi<sup>TM</sup> DIGITAL SYSTEMS**

The Sound of Digital Wireless Innovation

© 2013 Wi Digital Systems, Inc. All rights reserved. Stylized Wi logo is a registered trademark of Wi Digital Systems, Inc. in the United States and may be a registered trademark in other countries. Wi, Digital Wireless Stereo logos and Wi AudioStream, Wi Sure-Sound, Wi Sure-Fit, Wi Sure-Ears, Wi Micro-In-Ear are trademarks of Wi Digital Systems, Inc. All other trademarks included herein are the property of their respective owners. US and Foreign Patents Pending.

(Design and specifications subject to change without notice).


[www.widigitalsystems.com](http://www.widigitalsystems.com)

# Wi Transmitter

1. Audio IN Jack
2. Power ON/OFF
3. Power/Status LED
4. Volume UP
5. Volume Down
6. Mute
7. Link/Pairing
8. Lock
9. Operation Mode
10. USB Audio Interface & Charging Port
11. Belt Clip



## Transmitter Button Function

Function	Button	Hold	LED Status
Power ON/OFF	POWER	2 sec	Solid Green
Pairing Mode	LINK	3 sec	Fast Green Flash
Volume UP		Click	
Volume Down			
Mute ON/OFF		1.5sec	Solid Green & Blue
Lock Keypad		2 sec	Solid Green Only
Unlock Keypad		Click	Solid Green & Blue Flashes
MIC-In Stereo	MODE	2 sec	Solid Green & Slow Blue LED Flashes
MIC-In Mono	MODE	2 sec	Solid Green & Fast Blue LED Flashes
Line-In Stereo	MODE	2 sec	Solid Green & Two Blue LED Flashes


## Transmitter LED Indicator

Function	LED Status
Searching For Receiver	③ Flashing Green
Linked to Receiver	③ Solid Green
Lock Mode	③ Solid Green Only
Low Battery	③ Solid Green & Flashing Red
Charging With Power OFF	③ Solid Red
Charging With Power ON	③ Solid Red & Green
Charging Complete	③ Red OFF






# Wi Receiver

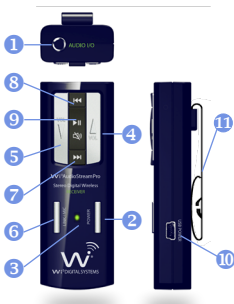1. Audio OUT Jack
2. Power ON/OFF
3. Power/Status LED
4. Volume UP
5. Volume Down
6. Link/MIC
7. Next Track
8. Previous Track
9. Mute/ Play/Pause
10. USB Charging Port
11. Belt Clip



\*Functions are activated when Transmitter is connected to a USB Port

## Receiver Button Function

Function	Button	Hold	LED Status
Power ON/OFF	POWER	2 sec	Solid Green
Pairing Mode	LINK	3 sec	Fast Green Flash
MIC On/Off	MIC	Click	2 Blue LED Flashes / Solid Green LED
Volume UP Volume Down		Click	
Mute ON/OFF		1.5 sec	Solid Green & Blue
Play/Pause	* 	Click	
Next Track	* 	Click	
Prev Track	* 	Click	

## Receiver LED Indicator

Function	LED Status
Searching For Transmitter	③ Flashing Green
Linked to Transmitter	③ Solid Green
Lock (Activated By Tx)	③ Solid Green Only
Low Battery	③ Solid Green & Flashing Red
Charging With Power OFF	③ Solid Red
Charging With Power ON	③ Solid Red & Green
Charging Complete	③ Red OFF