



www.WamplerPedals.com

Faux Analog Echo Manual

Thank you for your purchase of our Faux Analog Echo delay pedal. It is designed to emulate a full range of classic analog delay tones, with controls that allow you to dial it in perfectly for your rig.

The controls include:

- Level, which controls the volume of the delay
- Repeats, which controls the number of repeats
- Tone, which controls the tonality of the echo. Turn counterclockwise for darker echoes, clockwise for brighter echoes.
- Delay, which controls the delay time

Please note that this type of circuit eats batteries like candy. For best use, use a quality 9vdc adapter power supply. Power needed for the pedal is 9vdc center pin negative, just like most standard Boss™/Ibanez™/Etc type pedals. My favorite is the Visual Sound One spot™. If you are hearing odd sounds or the pedal is acting and sounding weird, generally it is because the battery is low.

There is a battery connection inside. However, if you would like to use it you will need to open the bottom plate and insert a battery. To reiterate, this type of pedal quickly drains batteries, so consider using an adapter, please.

Warranties

There is a 7-day "no questions asked" period where you may return the pedal if you do not like the sound of it. You will need to pay for shipping to us, however, and if anything is damaged or broken (except for malfunction or premature wear) we will have to deduct that from the refund. The 7 days start upon receipt of pedal. This is not valid if purchasing through a dealer however. In this instance, ask the dealer for their warranty policy should you wish to return it.

The warranty period on this pedal is 5 years parts and labor (except due to abuse), and becomes valid only AFTER you register your pedal with us at http://www.wamplerpedals.com/warranty_registration

For warranty repairs on these pedals, please contact us at http://www.wamplerpedals.com/contact_us.html