

# Swizz Army 6-in-1 Cable Tester

## INSTRUCTION MANUAL

Included in package: 1 Swizz Cable Tester with 4 rubber feet attached.  
Not Included: 2 AA batteries

The 6-in-1 works with six different types of connectors: XLR, 1/4" (mono or Tip/Ring/Sleeve), RCA, 1/8" (mono or Tip/Ring/Sleeve), TT, and MIDI.

The Swizz Army Cable Tester works in three main modes of operation:

**Cable Test Mode:** To use, move the On switch to the Cable Test position.

**Installed Cable Test Mode:** To use Installed Cable Test mode, hold down the Reset button while moving the On switch to the Cable Test position. The Power ON LED will blink to indicate the unit is in Installed Cable Mode.

**Test Tone Mode:** To generate test tones through the OUT jacks, move the On switch to the Test Tone position.

### CABLE TEST MODE:

To use Cable Test Mode, move the On switch to the Cable Test position. Insert one end of a cable into any OUT jack, and the other end into any IN jack. The Swizz Army shows you which input pins are connected to each output pin by lighting its LED in the Cable Wiring Display. The Grounded Shield LED will also light if the XLR OUT plug pin 1 is internally connected to the plug housing (this is optional on some XLR cables).

### TESTING FOR INTERMITTENT CONNECTIONS:

While in Cable Test Mode, pressing Reset stores the current Cable Wiring Display and clears the Intermittent LEDs. If any change occurs in the wiring displayed, the Intermittent LED corresponding to any Input pin which had the change will light and stay lit until the next time Reset is pressed. In this way you'll know if you have an intermittent cable even if it was intermittent for such a small period of time that you may have not seen the LED flicker.

### INSTALLED CABLE TEST MODE:

To use Installed Cable Test mode, hold down the Reset button while moving the On switch to the Cable Test position. The Power ON LED will blink to indicate the unit is in Installed Cable Mode.

Disconnect both ends of a suspect cable from the equipment it is attached to. Attach one end of the cable to the appropriate Output jack and leave the other end disconnected. The Cable Wiring Display works as before except it now shows any connections between OUT pins, not between OUT and IN pins. If there are no shorts between signals in the cable, then none of the LEDs in the Cable Wiring Display will light. Next, place a shorting jack on the other end of the cable. If the signals in the cable have no opens, then they'll make it all the way to the shorting jack and the Cable Wiring Display will show all pins as being shorted to each other. The display does not show a pin shorted to itself. The Intermittent testing feature works in the same way as Cable Test Mode.

# Swizz Army 6-in-1 Cable Tester

## INSTRUCTION MANUAL (continued)

**Test Tone Mode:** To generate test tones through the OUT jacks, move On switch to the Test Tone position.


**Warning: DO NOT use Test Tone Mode for MIDI cables. The Swizz Army™ does not generate MIDI data. While we won't guarantee it, the audio test tone should not harm MIDI equipment if connected.**

A test tone is placed on the Pin2 / Tip signal of all OUT jacks. The level can be set to either +4 dBu, -10 dBV, or Mic level (approximately -50dBV). Note that battery voltage level will effect the accuracy of the test tone output level. The Test Tone Mode is intended for use in checking audio system integrity and the rough setting of signal levels only and not for use as a voltage standard.


**1kHz / 440Hz Selection:** Pressing Reset during Test Tone Mode will switch the test tone frequency between 1kHz and 440Hz. The selection is indicated by its LED: On = 1kHz, Off = 440Hz. Test tone frequency accuracy is +/- 0.1% and is unaffected by battery voltage.

**Phantom Power Detect:** During Test Tone Mode, pins 2 and 3 are monitored for external DC voltage as commonly supplied to microphones. The Phantom LEDs will light any time the presence of a DC voltage greater than 5V is detected.

### CONNECTOR PIN DIAGRAMS

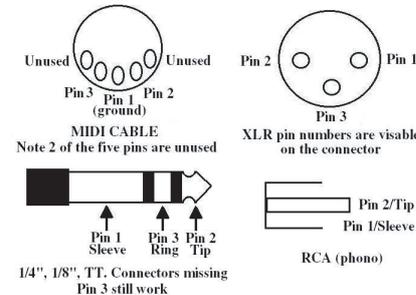

### READOUT DIAGRAMS

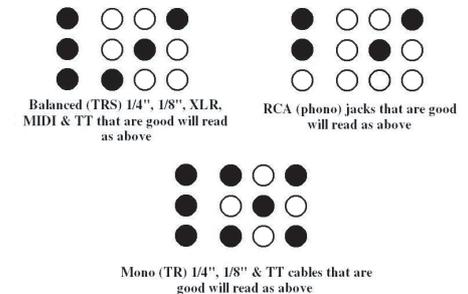

### TESTING A CABLE

- To test if the cable is good, set the SWIZZ ARMY to "Cable Test Mode". Insert both ends into the SWIZZ ARMY (in/out).
- Balanced 1/4", 1/8", XLR, MIDI, and TT cables will read as a big check mark if cable is good.
- If the LED's look anything other than in diagrams above, there is a cable fault. The additional LED's that light up indicate which wires have the fault.
- To test for an intermittent short in a cable, insert one end of the cable into the IN jack of the SWIZZ ARMY and set it to "Cable Test Mode". Press the reset button to make sure it's clear. Move the cable around. If there's an intermittent short in the cable, the LED corresponding to the shorted wire will light up and stay lit until you press the reset button. Checking again would verify your findings.