

Konnekt 24D

Konnekt 8



User's Manual

English Version

IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning!

- To reduce the risk of fire or electrical shock, do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.
- This apparatus must be earthed.
- Use a three wire grounding type line cord like the one supplied with the product.
- Be advised that different operating voltages require the use of different types of line cord and attachment plugs.
- Check the voltage in your area and use the correct type. See table below:

Voltage	Line plug according to standard
110-125V	UL817 and CSA C22.2 no 42.
220-230V	CEE 7 page VII, SR section 107-2-D1/IEC 83 page C4.
240V	BS 1363 of 1984. Specification for 13A fused plugs and switched and unswitched socket outlets.

- This equipment should be installed near the socket outlet and disconnection of the device should be easily accessible.
- To completely disconnect from AC mains, disconnect the power supply cord from the AC receptacle.
- The mains plug of the power supply shall remain readily operable.
- Do not install in a confined space.
- Do not open the unit – risk of electric shock inside.

Caution:

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

Service

- There are no user-serviceable parts inside.
- All service must be performed by qualified personnel.

EMC / EMI & CERTIFICATE OF CONFORMITY

EMC/EMI

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Customers in Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Certificate of Conformity

TC Electronic A/S, Sindalsvej 34, 8240 Risskov, Denmark, hereby declares on own responsibility that the following product:

Konnekt 24D & Konnekt 8

that is covered by this certificate and marked with CE-label conforms with following standards:

EN 60065 (IEC 60065)	Safety requirements for mains operated electronic and related apparatus for household and similar general use
EN 55103-1	Product family standard for audio, video, audio-visual and entertainment lighting control apparatus for professional use. Part 1: Emission.
EN 55103-2	Product family standard for audio, video, audio-visual and entertainment lighting control apparatus for professional use. Part 2: Immunity.

With reference to regulations in following directives:
73/23/EEC, 89/336/EEC

Issued in Risskov, August 2006
Mads Peter Lübeck
Chief Executive Officer

TABLE OF CONTENTS

INTRODUCTION

<i>Safety Instructions</i>	a
<i>EMC/EMI & Certificate of Conformity</i>	b
<i>Table of contents</i>	3
<i>Introduction</i>	4
<i>Konnekt 24D / Konnekt 8 compare chart</i>	5
<i>Quick Setup guide</i>	6
<i>Konnekt and Cubase</i>	7

OVERVIEW

<i>Front panel - Konnekt 24D</i>	10
<i>Bus-power notes</i>	13
<i>Rear panel - Konnekt 24D</i>	14
<i>Front panel - Konnekt 8</i>	15
<i>Rear panel - Konnekt 8</i>	15

SETUP EXAMPLES

<i>Studio</i>	16
<i>Mobile</i>	18
<i>Live</i>	19
<i>Stand Alone</i>	20
<i>Multiple Konnekts</i>	21

CONTROL PANEL

<i>Mixer Page</i>	22
<i>Setup Page</i>	26
<i>DSP Effects settings</i>	30
<i>Routing modes</i>	31
- examples Cubase LE	31
- examples Cubase SX	34
<i>Konnekt WDM driver</i>	35
<i>System Settings</i>	36
<i>Update Firmware</i>	39
<i>Reset to Default</i>	39
<i>Fabrik C</i>	40
<i>Fabrik R</i>	52

APPENDIX

<i>Signal Flow Konnekt 24D</i>	58
<i>Signal Flow Konnekt 8</i>	59
<i>Appendix ASIO channel names Konnekt 8</i> ..	60
<i>Appendix ASIO channel names Konnekt 24D</i>	61
<i>FAQ</i>	62
<i>Technical Specifications Konnekt 24D</i>	63

INTRODUCTION

Congratulations on your purchase of the Konnekt 24D / Konnekt 8

Konnekt 24D is a groundbreaking audio interface that integrates TC's world famous effects in a state-of-the-art design. It is designed for recording and performing musicians who want the highest possible sound quality from input, through built-in real-time effects, to the recording application.

Two combo inputs on the front panel combine outstanding mic pre-amp quality with true Hi-Z guitar optimized inputs. The light ring gives you easy access, instant control and visual feedback on important parameters directly from the front panel. You can stack up to four Konneks together using TC NEAR™ – Network Expandable Audio Recording – to obtain a massive amount of I/O and effects channels. If you are working with active monitors, you'll be delighted with the analog volume control that ensures a wide dynamic range. Dual headphone outputs are convenient when you're two in studio and one of the headphone outputs comes with an auto speaker muting function. If you don't need all the I/O or the DSP effects, choose Konnekt 8, which is a non-DSP version of Konnekt 24D with less I/O.

The Fabrik C channel strip and Fabrik R reverb known from TC's PowerCore platform are built into the Konnekt 24D and they work even when the unit is used in stand-alone mode.

Konnekt 24D also includes Assimilator Konnekt which is an extremely powerful equalization tool that “learns” the frequency curve of one piece of audio so it can be applied to another audio file - Ideal for analyzing and copying EQ curves of individual instruments, voices or reference mixes. It truly shines when applied to align the frequency response of different tracks recorded at different times compiled to appear on the same album.

One manual for both Konnekt 24D and Konnekt 8

This manual covers both Konnekt 24D and Konnekt 8. Konnekt 8 has the exact same high quality as Konnekt 24D but with less I/O options and no effects processing (Fabrik C, Fabrik R and Assimilator). Features that are omitted in Konnekt 8 are generally marked with “Konnekt 24D only”. We urge you to look at the product compare chart on page 9. The screenshots in the manual derive from Konnekt 24D.

Should this manual leave any of your questions unanswered, please use the TC Support service, which you can access via our website www.tcelectronic.com.

Over a period of time, we will collect the most frequently asked questions and update the manual accordingly. Manual updates are available for download from our website in PDF format.



Support for Cubase LE

Please search answers via <http://www.steinberg.net/knowledgebase>
or <http://www.cubase.net>

Upgrades are available from: <http://www.steinberg.net/cubaseLEupgrade>

KONNEKT 24D & KONNEKT 8 - FEATURE COMPARE CHART

Konnekt 24D

- Outstanding IMPACT™ mic pre-amps
- True Hi-Z guitar inputs – dedicated circuits for guitar and bass
- Front panel control of internal mixer parameters
- Analog volume control for perfect integration with powered speakers
- Network up to 4 units via the TC NEAR™ 1394 FireWire based network to get more inputs, outputs and effects channels
- Full feature direct monitoring – With effects and also between networked units
- Intuitive control panel with automatic input detection
- 3 DSP programs for total recall of internal routing, mixer and effects settings
- FireWire bus powered
- DICEII digital interface chip with JET™ Jitter Elimination Technology
- Low latency drivers: WDM, ASIO and CoreAudio (including Intel Macs)
- Dual headphone outputs, one with auto speaker muting
- 24-bit/192kHz sampling rate
- Sample accurate MIDI
- 14/14 I/O: 2 mic/inst/line, 2 line inputs and 4 line outputs, 8 ADAT and 2 S/PDIF (optical and coaxial) inputs and outputs
- Cubase LE included
- Built-in real-time DSP effects; Fabrik R reverb and Fabrik C channel strip based on MINT™
- Assimilator Konnekt Native Fingerprint EQ

Konnekt 8

- Outstanding IMPACT™ mic pre-amps
- True Hi-Z guitar inputs – dedicated circuits for guitar and bass
- Front panel control of internal mixer parameters
- Analog volume control for perfect integration with powered speakers
- Network up to 4 units via the TC NEAR™ 1394 FireWire based network to get more inputs and outputs.
- Direct monitoring
- Intuitive control panel with automatic input detection
- FireWire bus powered
- DICEII digital interface chip with JET™ Jitter Elimination Technology
- Low latency drivers: WDM, ASIO and CoreAudio (including Intel Macs)
- Dual headphone outputs, one with auto speaker muting
- 24-bit/192kHz sampling rate
- Sample accurate MIDI
- 4/4 I/O: 2 mic/inst/line, 2 line inputs (AUX) and 2 line outputs, 2 S/PDIF (coaxial) inputs and outputs
- Cubase LE included

QUICK SETUP GUIDE

Up and running in 10 minutes

This quick-guide will help you set up the Konnekt in a typical application. For further details please refer to later sections of this manual.

Unpacking

- Open the box from the top and remove cabling.
- Lift out styrofoam insert, then using both hands lift out Konnekt.
- Remove plastic bag from Konnekt.
- Inspect your Konnekt for signs of transit damage.
- In the unlikely event of this having occurred, inform the carrier and the supplier.
- Keep all the packaging if damage has occurred, as this will show evidence of excessive handling force.
- It is also a good idea to keep the packaging if possible for future transportation.

Check contents

The package should contain the following items:

- Konnekt audio interface
- Power supply
- FireWire cable
- CD with software etc.
- Safety Instructions

Computer Requirements

Mac OS

- PowerPC (1 GHz or higher) or Intel CPU
- 256 MB RAM
- FireWire (IEEE 1394) port
- OS X 10.3.9

Windows

- Pentium 4, 1.6 GHz or faster
- 256 MB RAM
- FireWire (IEEE 1394) port
- Windows XP

* We recommend running Konnekts on a dedicated FireWire bus. If your computer has one or more FireWire connections on the

chassis they will typically run on the same FireWire bus. You may connect the Konnekt to one of these. If you intend to run more FireWire devices simultaneously, such as e.g. an external hard drive, we recommend running this device on a separate bus. This would typically be on an installed FireWire PCI card. Note that such a FireWire PCI card typically has 3 ports but these also operate on a single bus.

Software installation

- We recommend installing the software before connecting the Konnekt.
- Refer to the **Konnekt Installation Guide** supplied in the package and on the Konnekt CD.
- If you are familiar with software installation procedures in general you may simply insert the accompanying CD-ROM in your computer's CD drive and follow the instructions.

TC Near control panel

If Konnekt drivers are installed correctly you are able to open the TCNear control panel.

On Windows computers:

Press: Start/Programs/TC Electronic/TC Near
The TC Near can also be accessed via the Windows Control panel.

On Mac computers:

/Applications/TC Near
You may also start the application from System Preferences.



TC ELECTRONIC does not support Cubase.
Please refer to the Cubase manual for general and detailed information.

Konnekt and Cubase

Cubase LE is delivered with Konnekt. If you choose to use Cubase as your host application you can follow this short guide to setup Konnekt with Cubase.

QUICK SETUP GUIDE

Cubase Installation

In the following we assume that you have already followed the Konnekt Installation Guide.


- Close all running applications.
- Insert the Konnekt CD ROM in your CD rom drive.
- The Konnekt Installer most likely opens automatically.
- Close the application as we assume you have previously followed the Installer once.
- Browse the CD and click on the Cubase_LE_setup.exe file located in the Cubase LE folder.
- Follow the installation procedure to install Cubase.

Windows: - During the installation procedure you will be asked to enter a serial number. This number is found on the CD label.

Mac: - Unlike the Windows installation procedure, it is not required to enter any serial number.

Selecting Konnekt as your audio interface in Cubase

- Open Cubase.
- Go to Devices - Device Setup

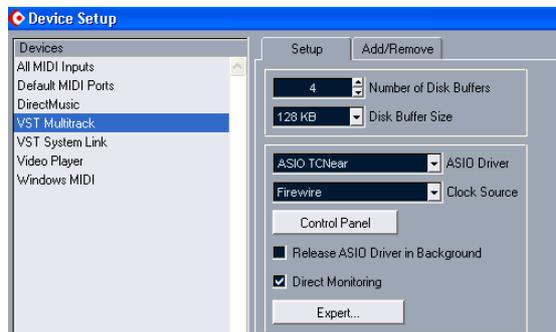

- Select “VST Multitrack” in the left column
- Select “ASIO TCNear” as Master ASIO Driver via the dropdown menu in the right side of the display.
- Click OK


Cubase Project example

- Create a new empty project.
- Go to Devices - VST Inputs

In this menu you can activate/deactivate the Konnekt inputs and also label these for your own convenience.

ASIO channel names / Port

The left column describes the physical input ports on Konnekt. The center column holds on/off buttons for the inputs. In the right column you are able to assign a name of your choice to each input. Depending on the selected sample rate there are limitations on available digital channels. Please refer to the appendix section to see the ASIO channel names and distribution.

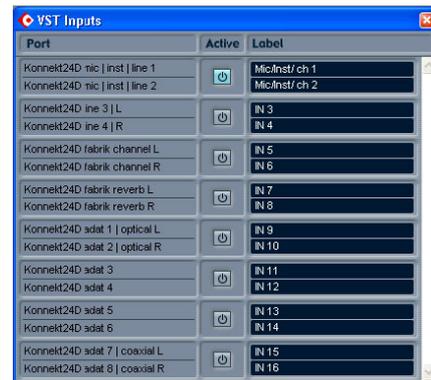

In Cubase LE for Macintosh the VST inputs are not named automatically. However, you may enter channel names of your choice. For Konnekt 24D we suggest using the names as they appear in the screenshot above.

QUICK SETUP GUIDE

In the example on the previous page we have labeled the two front panel inputs: “Mic/Inst ch 1” and “Mic/Inst ch 2”. We have also activated those inputs by pressing the “power-button”.

- Exit the VST Inputs menu.
- Create an audio track via: “Project - Add track - audio”



Now you need to select the input and output for that track.


- Click on the “in field” as illustrated above. Now select one of the inputs that we earlier setup in the VST Inputs menu. E.g. “Mic/Inst/ ch 1”.
- Unless you have changed the default settings for the output busses the “out” is set to “BUS 1”. Leave it.

You can now record via the Konnekt’s front panel inputs and playback via the Main outs.

Using Fabrik R as a Send effect


You can also use Fabrik R as a send/return effect from Cubase.

- Go to Devices - Device Setup - VST Multitrack and make sure that Direct monitoring is not ticked.

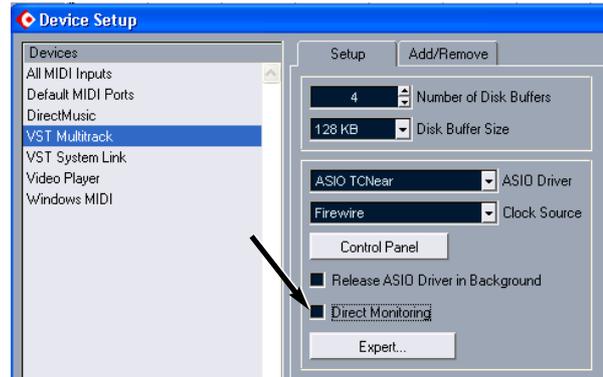

- Now go to VST outputs and activate a bus using the “power-button”.

In the following example we use BUS 2 but we have renamed the bus and called it “Reverb”.

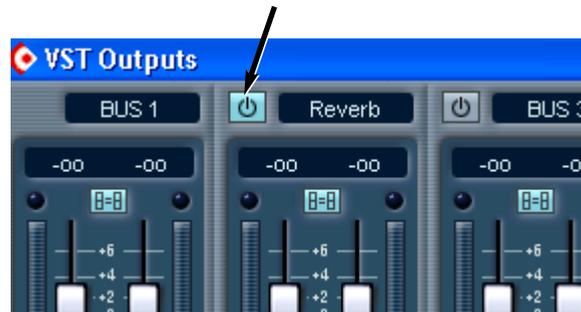

QUICK SETUP GUIDE


- Furthermore we have routed the output of the “Reverb bus” to Fabrik R. This is done via the field in the bottom of the bus-channel.



- Now, (for convenience only), go to: Devices - VST Inputs and change the label for “Konnekt 24D fabrik reverb L” and “Konnekt 24D fabrik reverb R” to “Reverb L” and “Reverb R”.
- Activate the inputs pressing the “power button”



- Go to the project window.

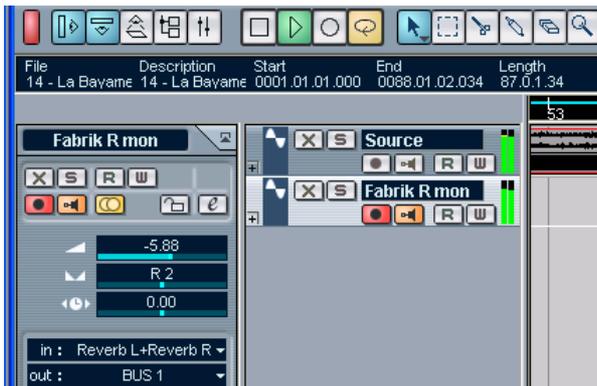

- In the example above we have a track with a stereo audio file. The track we have renamed “Source”. This is the track we would like to add the Fabrik reverb to.
- Below we have created an additional audio-track. On this track we will monitor the Fabrik reverb.

We have renamed the track “Fabrik R mon”

- Make the track stereo pressing the mono/stereo button.



- Activate the monitor symbol on the “Fabrik R mon” track.



- Set “in” to Reverb L+Reverb R
- Set “out” to BUS 1




- Mark the Source track and go to sends, select “Reverb” in send 1 and activate the send by pressing the “power-button”.
- Now grab the send slider and slide it to the right a listen to the nice Fabrik reverb.



Power-button Reverb selected Send slider

FRONT PANEL OVERVIEW - KONNEKT 24D

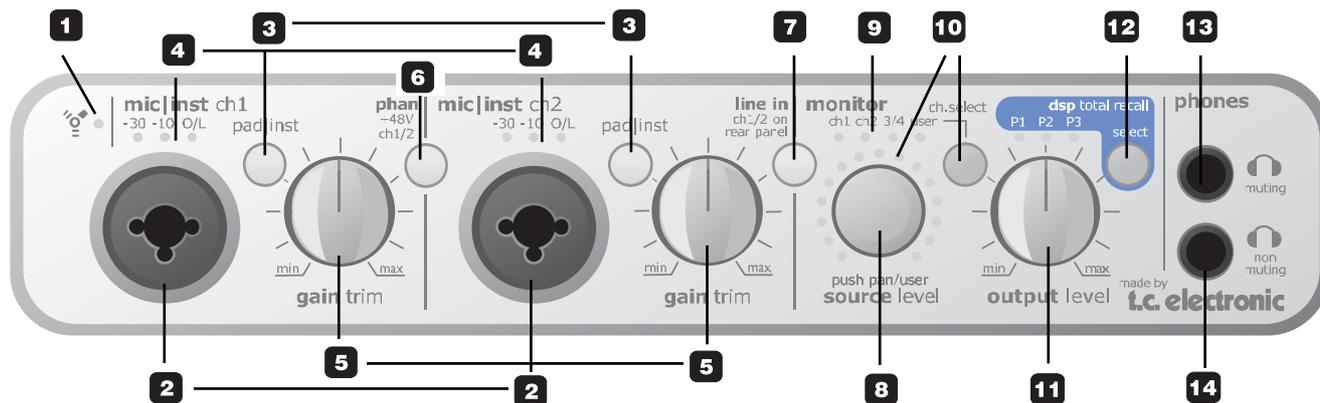

1 FireWire/Power LED indicator

When Konnekt is hooked up via FireWire the blue LED can indicate the following:

Steady lit: Sufficient power

Flashing: Hardware error or FireWire communication error.

Off: The Konnekt has no connection to the driver, maybe because the driver is not installed.

2 Mic/Inst ch1/ch2 on Combo XLR/Jack

Combo XLR/Jack inputs. Both XLR and 1/4 inch jack can be used with this connector.

The XLR connection (balanced)

Connect a microphone and your signal is processed via the IMPACT™ mic pre-amps.

- For condenser microphones activate phantom power. see also (6) on the following page.
- The Input LEDs (4) indicate the level of the input signal. If the red O/L LED is lit your signal is too “hot” and you should press “PAD/INT” to attenuate the signal by 20dB.

The 1/4 jack connection

- Press PAD/INST to activate this circuit.



The 1/4 “jack part” of the connector is a high quality Hi-Z circuit that is designed especially for connecting a passive guitar pick-up system (e.g. Strat-type) directly.

The jack inputs on the front panel are unbalanced. If you wish to connect balanced equipment using TRS jacks you should connect via the line inputs on the rear panel.



Important!

If you use the 1/4 jack part of the Combo jack/xlr connection PAD/INST must be set to “in” position.

3 Pad/Inst selectors

The PAD/INSTRUMENT selector can attenuate the input sensitivity by 20dB. If you cannot attenuate the signal sufficiently using the GAIN/TRIM knob you should use the -20 position. This is typical when connecting line-level instruments.

FRONT PANEL OVERVIEW - KONNEKT 24D

4 Input LEDs

Three input level indicators. -30dB, -10dB and 0dB. First adjust the Gain Trim so the 0dB LED is only lit at absolute peaks. Then reduce the Gain Trim slightly so the 0dB LED is never lit.

5 Gain/Trim

Use this control to set the appropriate input level. (see previous paragraph)

6 Phantom Power +48v

The XLR part of the Combo XLR/Jack connections features +48 phantom power when this switch is pressed. Phantom power is used to power line-drivers and condenser microphones.

There are three main types of microphones.

Condenser microphones - phantom power required except for some models that use proprietary power supplies or built-in batteries. Please check the microphone's manufacturer specifications for details.

Electrodynamic microphones - phantom power is not required but does no harm to the microphone.

Ribbon microphones - **phantom power could damage the microphone. Search advice from the manufacturer of the microphone!**

Only the condenser type requires phantom power. It is however no problem combining a condenser microphone in e.g. ch. 1, with a standard electrodynamic microphones (such as e.g. a Shure SM57) in ch. 2. Nor is it any problem to activate phantom power and use a condenser microphone to one of the inputs and connect a guitar using a 1/4 jack to the other input, as phantom power only concerns the XLR connections.

7 Line In - ch 1/2 on rear panel

This switch alternates between using the front panel inputs or rear panel inputs for channels 1/2. Rear panel inputs are line inputs.



Connect a TV, a radio tuner or any secondary device that you don't use in music production to Line inputs 1/2 on the rear panel. Use the "Line In" switch to alternate between front and rear panel inputs.

8 Source Level (push to control Pan)

Controls the level or pan-position of the selected channel. The light ring shows the level or pan position of the selected channel.

By default the Source Level knob controls the source level of the selected channel. Press once and turn the knob to pan the signal. Leave the knob untouched for 1 second and it will automatically return to volume control function.

9 Monitor LEDs

Indicate which channel is monitored. Select channels using the Ch. Select button.

10 Ch. Select

The LED light-ring around the SOURCE level knob indicates the source level of channel you have selected or the pan position if the Source Level knob (8) has been pushed.

Select between monitoring the following channels:

- Ch 1 - Front or rear panel input channel 1*
- Ch 2 - Front or rear panel input channel 2*



* Select between channel 1/2 front and rear panel using the Line in switch on the front panel.

FRONT PANEL OVERVIEW - KONNEKT 24D

Ch 3/4 (Konnekt 24D)

- Channels 3/4 (note that channel 3/4 are always linked).


DI (Konnekt 8)

- Monitor the signal present on S/PDIF Digital In.

User

- The Setup page allows you to setup which channel/channels are monitored when "User" is selected. The options will vary depending on the connected devices.

It is also possible to assign a level control of a channel to the LED light-ring via the Mixer page on the TC Near computer user-interface by pressing the light-ring icon on the channel of your choice:

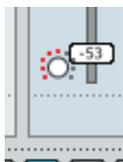

11 Output level

Sets the output level of analog outputs 1-2 and of the head-phone outputs.

12 DSP Total Recall (Konnekt 24D only)

Three program settings can be stored in locations P1, P2 and P3. These programs concern settings for Konnekt pages only - not Fabrik R or Fabrik C. Fabrik R and Fabrik C presets are handled via the Fabrik preset management.

AUX (Konnekt 8 only)

On Konnekt 8 this section is replaced by a AUX switch.



The AUX switch allows you to monitor the signal present on the AUX inputs (rear panel)
An ideal function if you want to monitor e.g. a keyboard thru the AUX inputs.

13 Phones muting

Connect a set of headphones here. Main outputs will be muted.

14 Phones non muting

Connect a set of headphones here. Signal is still passed to Main outputs.

Bus Power

Konnekt 24D and Konnekt 8 are able to work with FireWire bus-power. With FireWire bus-power the device is powered directly from the FireWire connection and you do therefore not need to use the external power supply (included with Konnekt).

There are a few things to be aware of regarding bus power:

4-pin FireWire connectors

Please beware that not all FireWire ports are able to provide bus power at all. Some laptop computers carry 4 pin connectors. These do not provide bus power.


Several Konnekts on a single FireWire bus

If you run more than one Konnekt device on a FireWire bus, only one of them can be bus-powered; the others require power from the supplied external power supply.

Insufficient bus-power

Some laptop computers, even those with 6-pin connectors, do not provide enough bus-power for a single Konnekt unit to run properly. If you experience any problems, please use the provided external power supply as the first effort to solve the problems.

REAR PANEL OVERVIEW - KONNEKT 24D

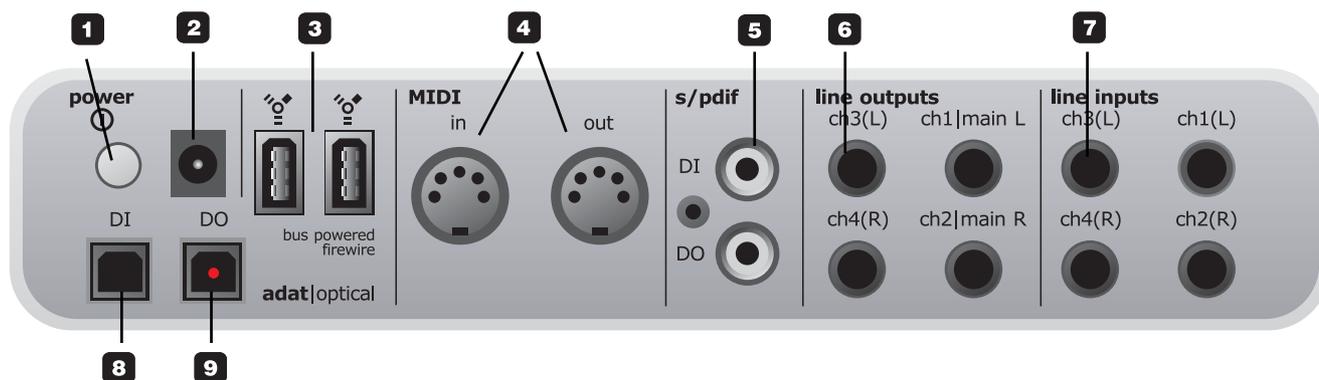

1 Power Switch

On/off switch for the unit.

2 Power In

Konnekt can be bus-powered from the computer's FireWire port. Check your computer's specifications. If more than one Konnekt is used or your computer delivers insufficient power on the FireWire port - use the supplied 12VDC power supply.

3 FireWire connectors

IEEE 1394 connectors for connecting to a computer and/or linking multiple Konnekt units. Konnekt can be bus-powered* from the computer's FireWire port. Check your computer's specifications.



Before plugging the firewire connectors, make sure that plugs are positioned correctly.

* Please read the section regarding bus-power on page 13.

4 MIDI In/Out

Standard MIDI in/out. MIDI out is automatically set to MIDI thru in stand alone mode. When Konnekt is used in stand-alone mode, MIDI out always acts as MIDI thru.

5 Digital in/out - Coaxial S/PDIF

24bit digital in/out on S/PDIF. In addition to standard I/O it is possible to insert e.g. an external digital effects unit and use this as a send effect.

6 Line Outputs (balanced)

1/4 inch jack outputs for:

- Main Left (ch 1) and Main Right (ch 2).
- Left (ch 3) and Right (ch 4)



When connecting Main outs to a device (e.g. active speakers) with balanced inputs: "ground" and "cold" must be connected.

- On XLR type plugs this is pins 1 and 3.
- On Jack type plugs it is "sleeve" and "ring".

7 Line Inputs (balanced)

- Ch 1 (L)
- Ch 2 (R)
- Ch 3 (L)
- Ch 4 (R)

8 DI - Digital In

Optical S/PDIF or ADAT Toslink for up to 8 channels of digital in, depending on format and sample rate.

9 DO - Digital Out

Optical S/PDIF or ADAT for up to 8 channels of digital out.

FRONT & REAR PANEL OVERVIEW - KONNEKT 8




Please refer to the description of the Konnekt 24D front panel on the previous pages. The next few lines describe the variations on Konnekt 8.

AUX In

The AUX IN LED and button replace the DSP recall functions on the Konnekt 24D.

Press the AUX IN button to monitor the signal present on the AUX inputs on the rear panel. The LED indicates when AUX monitoring is enabled.

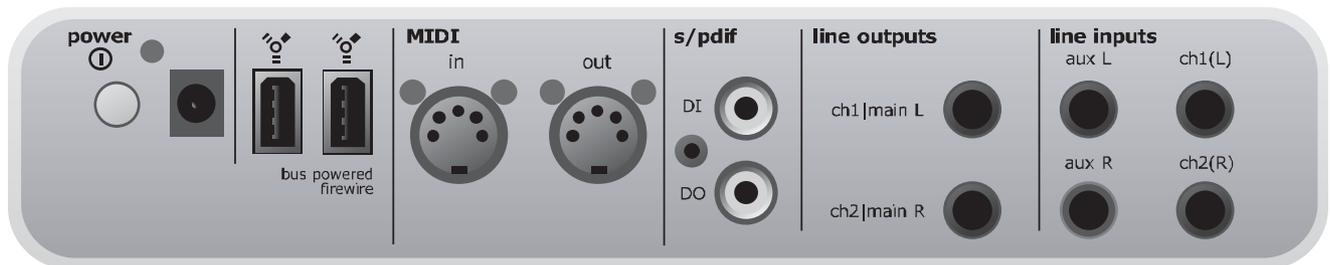

Please refer to the description of the Konnekt 24D back panel on the previous pages. The next few lines describe the variations on Konnekt 8.


Aux L and Aux R

External line instruments can be connected to the aux inputs for monitoring purposes. To monitor the aux inputs press the AUX IN button on the front panel. Signals present on these inputs cannot be recorded.

The following features have been omitted from the Konnekt 8:

- Optical inputs/outputs.
- Line outputs 3/4
- Line inputs 3/4

SETUP EXAMPLES - "STUDIO"

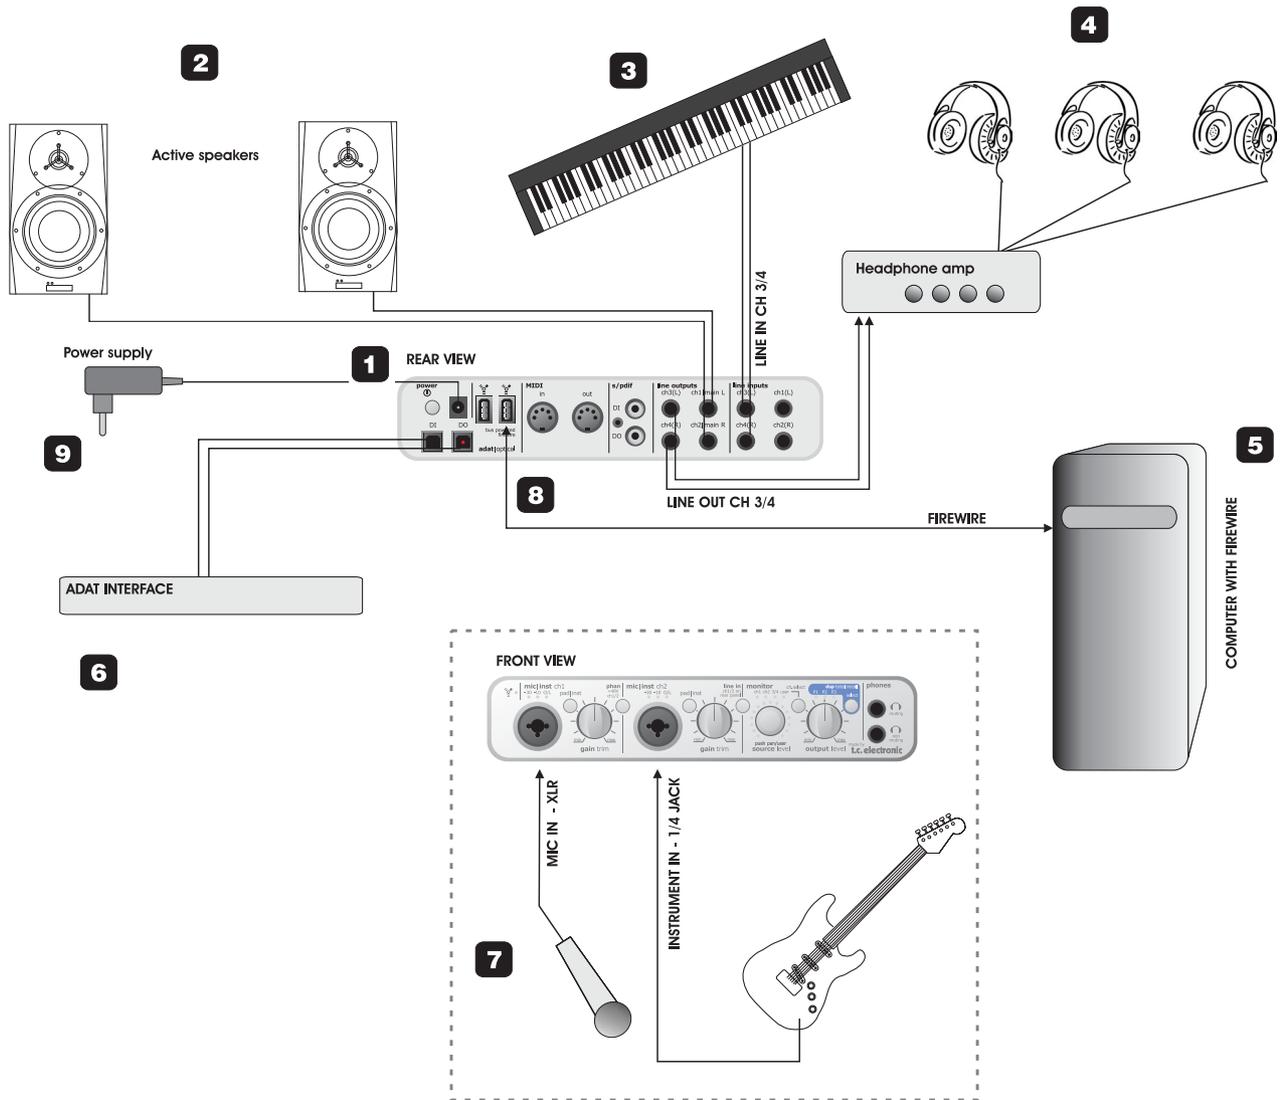

SETUP EXAMPLES - “STUDIO”

1 Konnekt 24D Rear View

The Konnekt rear panel. For better view please refer to the section “Rear Panel Overview”.

2 Active Speakers

In this particular setup we illustrate the Konnekt in use with a set of active monitors. You may of course use a standard amplifier and passive speakers as you prefer.

3 Keyboard

A keyboard is connected to Line In 3/4 for monitoring/recording purposes. On Konnekt 8 you may use the aux inputs for monitoring only (no recording).

4 Headphones

In this illustration multiple headphones are connected via a separate headphones amp. Line outputs 3/4 on the Konnekt are used to feed the headphone amp. On the frontpanel an additional set of headphones can be connected to the non-muting headphones connection on the frontpanel.

5 Computer

Computer with FireWire interface. Please see the system requirements section for information on minimum system requirements.

6 ADAT interface

Digital I/O options can be extended with the use of an ADAT interface. When used in combination with the 2 channels on coaxial S/PDIF, digital channels 7/8 can be set to either ADAT or optical S/PDIF. See also page 26.

7 Konnekt 24D front + instruments

Front panel view of the Konnekt illustrated with a microphone and an electric guitar setup.

Connecting an electric guitar directly to Konnekt. Connect a guitar using a standard 1/4 jack and press the PAD/INST button to “in” position.



Connecting a Condenser microphone. Konnekt delivers +48v phantom power on the XLR part of the Combo connection for use with condenser microphones. Press “phan” to activate phantom power:




8 FireWire connection to computer

Use as standard FireWire (IEEE 1394) cable between the computer and Konnekt. Any of the two connections can be used.

9 Power supply

Konnekt can be bus-powered directly from your computer’s FireWire connection. Please refer to the computer’s manual to see if this is an option. If bus-power is insufficient or if more than one Konnekt units is connected to one FireWire bus, you should use the external power supply delivered with the Konnekt.

SETUP EXAMPLES - “MOBILE STUDIO”

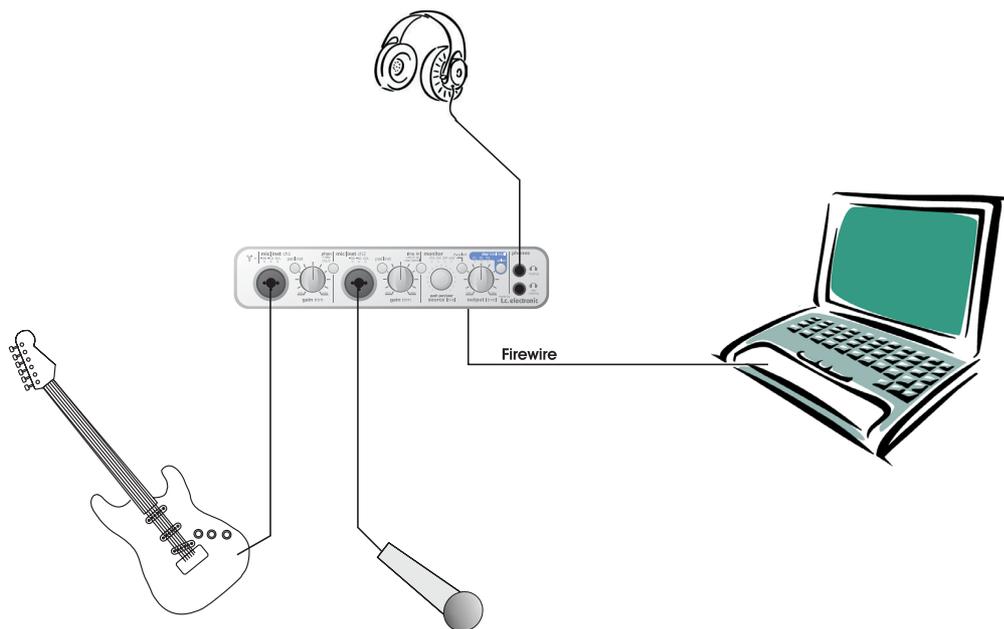

This is a typical small mobile setup with just a guitar, a microphone and a laptop computer.

- Connect the guitar to ch 1, using a standard 1/4 inch jack mono-mono, and set the PAD/inst to “in” position. Set input level using the GAIN TRIM knob.
- Connect a microphone to ch 2 and use the PAD/inst selector to correct input sensitivity.
If you have connected a condenser microphone the +48 phantom power switch must be pressed.
- Connect your laptop computer using a standard FireWire cable.
- Connect headphones to one of the two headphone outputs. The upper connection will mute the main outputs on the rear panes, but as nothing is connected to the main outputs it is indifferent which output you use.




If only one Konnekt is used and no other firewire devices are connected to the computer's firewire ports, Konnekt can be bus-powered directly from the computer's FireWire port*. This is ideal when recording in the field.

However, Konnekt does use power and will drain the computers battery faster (especially if phantom power is used), and we therefore recommend using a power supply for either the computer and/or Konnekt when possible.

* Please read the section regarding bus-power.

SETUP EXAMPLES - "LIVE"

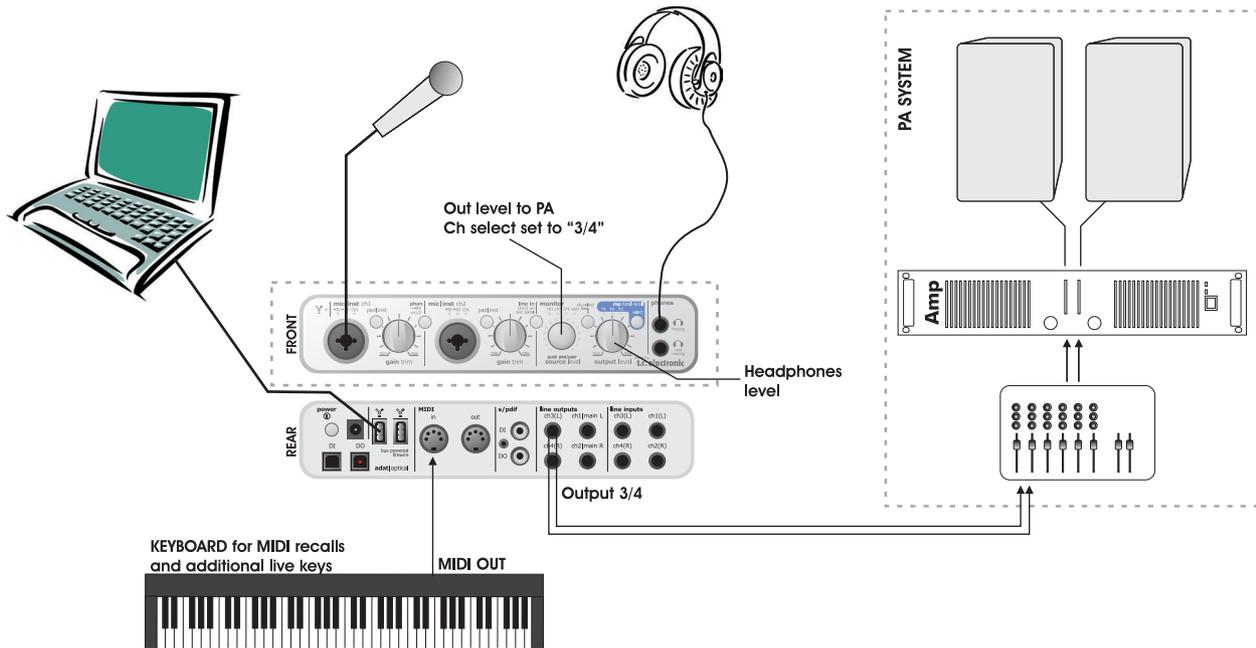

This example illustrates how Konnekt integrates perfectly in a live setup. The objects in a live setup could be:

- DAW/laptop as source for playing audio-files.
- Headphones for undisturbed monitoring using the OUTPUT level control for separate headphones level.
- Microphone for vocals utilizing Konnekt's IMPACT™ pre-amps and e.g. the Fabrik C channel strip*.
- MIDI keys for additional keyboards and/or program changes.
- Distribution to PA (amp-speakers) using the SOURCE level control as separate level control.


Connect all devices according to the illustration above. Remember to activate phantom power if you are using a condenser microphone. Also note that outputs 3/4 in this setup are used as main outs to PA.

Advantage of this setup

This setup enables you to route different signals to the headphones and PA system via the DAW. This is useful for numerous purposes. E.g. for excellent cue monitoring for DJ's as well as individual level control of the two signals.

* Konnekt 24D only

SETUP EXAMPLES - “STAND-ALONE”

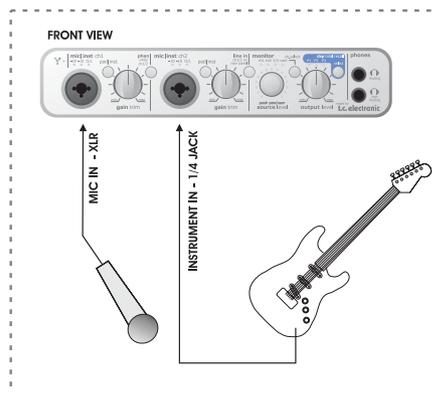


Konnekt 24D can be used with no computer connected as a stand-alone unit still providing both the excellent mic pre-amps and Hi-Z inputs on channels 1 and 2. It is even possible to use the included Fabrik R (reverb) and Fabrik C (channel strip & comp).

Set up correctly you can even alternate between three programs/presets using the “TOTAL RECALL” button. The programs are prepared via the TC Near software Control panel.

- Connect the microphone to Ch1 and the guitar to Ch2 on the front panel. Activate phantom power if you are using a condenser microphone.
- Connect a CD player to Konnekt using either the CD-player’s analog outputs to Konnekt Line Inputs 3/4 or as illustrated using the CD player’s optical S/PDIF out to “Optical DI” on the Konnekt.
- Active speakers can be used as monitors. Feed these with signal from Main Out L/R.


SETUP EXAMPLES - “MULTIPLE KONNEKTS”

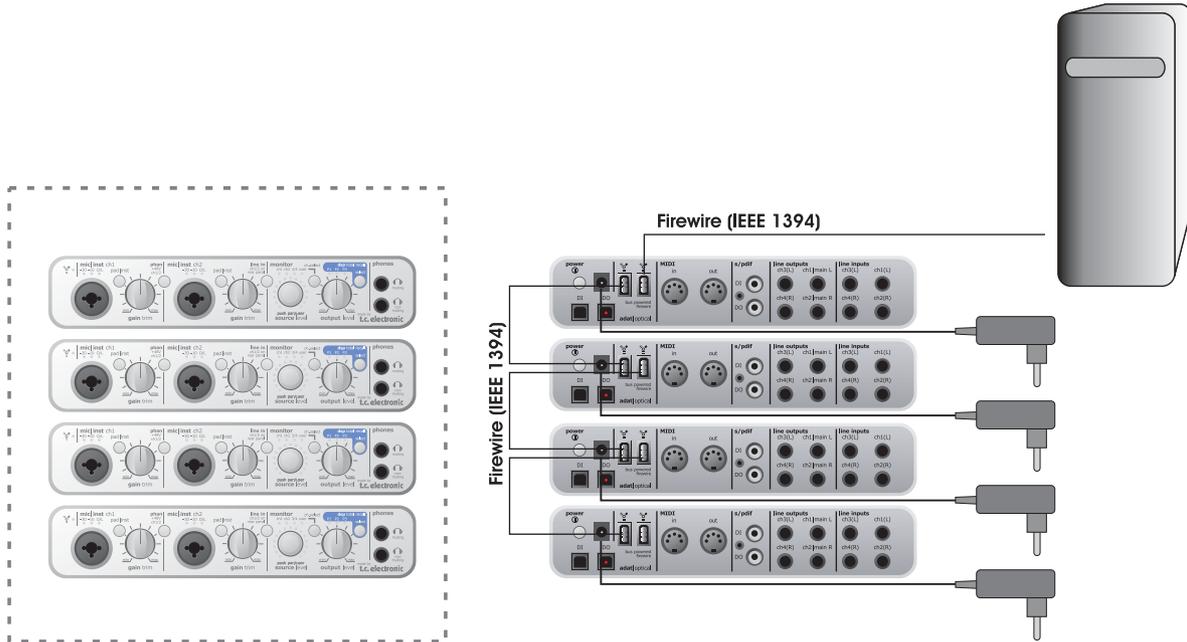

This setup shows how 4 Konnekt 24D units are hooked up via FireWire. With this setup you have up to 4 times as many inputs/outputs as with a single unit.

- If you have more than one Konnekt device on the FireWire bus, only one of them can be bus-powered; the others need external power supply. In this example, all of them use the external power supply.
- Connect the units using standard firewire cables and connect one of the units to the computer also using a firewire cable.
- Since the computer acts as master controller when there are multiple devices attached, it is not possible to work with more devices in stand alone mode (when the computer is off or not attached)

THE CONTROL PANEL - MIXER PAGE

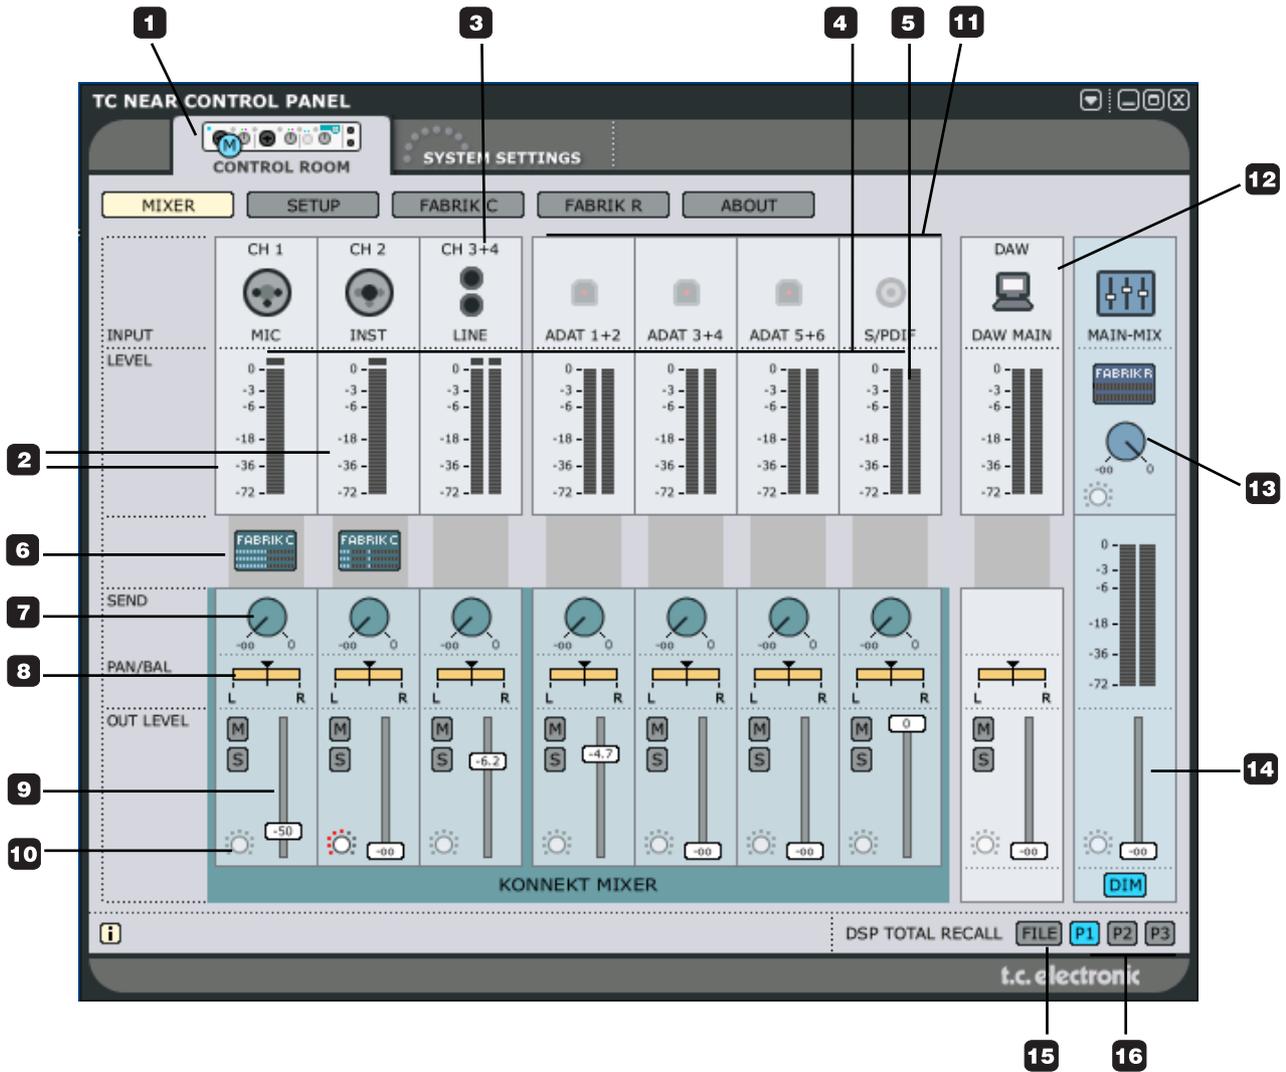

THE CONTROL PANEL - MIXER PAGE

1 The Konnekt select tabs



Channels 1/2 & 3/4

2 Channels 1/2 - mono/stereo

The illustration on the previous page shows channels 1/2 in dual mono mode. The channels may be linked to one stereo channel via the Setup page. This will change the appearance of these channels. Please refer to the description of the Setup page on the following pages for details.

3 Ch1/Ch2 auto-sensing input

Channel 1/2 connections on the front panel are auto-sensing. They automatically detect whether you have connected an XLR (microphone) or 1/4" jack (instrument), and indicate this graphically.

These are the options



Nothing connected



Mic



Inst./jack

Ch3/Ch4

Connections for line channels 3/4 are located on the rear panel.



All Channels

4 Input Meters

These meters indicate the level of the signal present on the input channels. Best signal to noise ratio is achieved when the input signal only occasionally peaks at "0". Adjust the level on the sending device.

5 Clip LED (RED)

When the Clip LED is lit the signal is too hot. Reduce the level on the sending device to compensate.

6 Fabrik C symbols for channels 1/2

Press the symbol to activate/deactivate the Fabrik C channel strip plug-in. Adjustment of Fabrik C parameters is done via the Fabrik C page.

7 Send

Use the SEND knobs to send signal from each channel to the Fabrik R (reverb).

To actually hear the reverb make sure that Fabrik R is active.

8 Pan

Pan left/right using the left mouse button.

Press Ctrl+Shift and left mouse button to center.

9 Out Level

Master out level.

10 Light Ring Assignment

All faders with the "light ring" indication can be assigned to the "source" controller on the front panel. When assigned, the light ring on the front panel displays the fader position.




11 Digital Channels

The configuration of the digital channels is set via the Setup page. Please refer to the description on the following pages.

THE CONTROL PANEL - MIXER PAGE

12 DAW Main - meters and fader

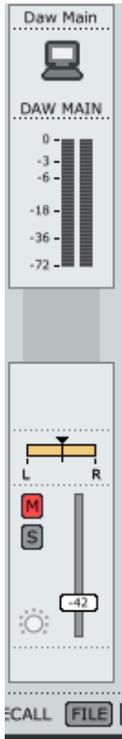

This section of the mixer handles the monitoring of the main outputs from your DAW. Having the controls at this place allows you to mix the channels with the DAW signal, right here on the Mixer page instead of having to switch between the programs.

13 Effect Return level - Fabrik R*

The reverb plug-in Fabrik R is set up on a bus that you can send to from each channel. The return level of this bus is set using this Effect Return level controller.



* Konnekt 24D only

14 Monitor Mixer - Main Out level

This is where you set the output level for the monitor mixer. The output from the mixer can be sent to any of the physical outputs (Line 1+2, 3+4, S/PDIF or ADAT).

*Konnekt 8 - outputs 1-2 only.



TIP You can instantly mute a channel by holding ctrl+shift and click on the fader handle.

Preset Management

The comprehensive file based preset architecture makes storing presets a simple process. Presets are saved as discrete files on your hard drive. Once a preset is saved into the default location, it automatically appears in the “File” menu.

15 Preset File Menu

Pressing the File button will open the File menu.

The File menu allows you to load or save into the currently selected program. P1, P2 or P3.

The following options are available from the File menu.



LOAD

By selecting Load, you can navigate to any folder on the system, including shared folders. By default you will be directed to the default location for Konnekt presets. Only presets located in the default file locations for TC Near control panel will be visible in the drop down menu.

SAVE

By selecting “Save”, you can save your preset to any folder on the system that you have write access to, including any shared folder. By default, presets are saved to the default location for the TC Near control panel presets.

16 P1, P2 & P3 (Konnekt 24D)

The TC Near control panel has 3 preset locations to which you can load and save presets from. These presets are “total recall” and holds all settings on all pages except for the Fabrik plug-ins.

SETUP PAGE

The screenshot displays the 'SYSTEM SETTINGS' window for the 'TC NEAR CONTROL PANEL'. The window is divided into several sections:

- CONTROL ROOM:** Includes a 'NICK NAME' field set to 'Control room' and navigation buttons for 'MIXER', 'SETUP', 'FABRIK C', 'FABRIK R', and 'ABOUT'.
- INPUT:**
 - ANALOG:** Features two input channels (1 and 2) with 'PAD | INST' buttons and a 'STEREO LINK' button. Callouts 1, 2, and 3 point to these elements.
 - DIGITAL INPUT SETUP:** Includes 'OPTICAL' (LOCK), 'S/PDIF' (NO REF), and 'ADAT' options (ADAT 1-8, ADAT 1-6 + S/PDIF, OPTICAL + COAXIAL S/PDIF). Callouts 4 and 5 point to these options.
- MONITOR:**
 - MIXER (DIRECT MONITORING):** Has 'ON' and 'OFF' radio buttons.
 - LIGHT RING ASSIGN:** Shows a 'monitor' display with 'ch1', 'ch2', '3/4', and 'user' indicators. A dropdown menu is set to 'Fabrik R level | decay'. Callouts 6, 8, 9, and 7 point to these elements.
- OUTPUT:**
 - LINE 3+4:** SOURCE: 'Konnekt mixer'. Callout 10 points to this dropdown.
 - S/PDIF:** SOURCE: 'Konnekt mixer'. Callout 11 points to this dropdown.
 - FORMAT:** Radio buttons for 'ADAT' and 'OPTICAL S/PDIF'. Callout 12 points to the 'ADAT' option.
 - SOURCE FOR ADAT 1+2:** Dropdown set to 'Daw adat 1+2'. Callout 13 points to this dropdown.
- STAND ALONE CLOCK SETTINGS:**
 - SYNC SOURCE:** Dropdown set to 'Internal'. Callout 14 points to this dropdown.
 - SAMPLE RATE:** Dropdown set to '44.1 kHz'. Callout 15 points to this dropdown.
- DSP EFFECTS SETTINGS:**
 - AT 96kHz, USE:** Dropdown set to 'Fabrik C'. Callout 16 points to this dropdown.
 - FABRIK C ROUTING:** Dropdown set to 'Internal mode'.
 - FABRIK R ROUTING:** Dropdown set to 'Internal mode'.
- Footer:** Includes 'Monitor mix setup' (callout 6), 'DSP TOTAL RECALL' buttons (FILE, P1, P2, P3), and the 't.c. electronic' logo.

Input Section - Analog

1 Ch1/Ch2 auto-sensing input

Channel 1/2 connections on the front panel are auto-sensing. They automatically detect whether you have connected an XLR-plug (microphone) or 1/4" jack (instrument), and indicate this graphically.

These are the options



Nothing connected



XLR



Inst/Jack

2 PAD/INST

On the Konnekt front panel you can set Input sensitivity using the PAD/INST selector. When the PAD icon is lit PAD (line level) sensitivity is selected. This is the correct choice if you connect keyboards or guitar pre-amps/pedals or similar.

When the LED is off the sensitivity is increased and you can connect a guitar with passive pickups directly.

3 Stereo Link (Mixer view)



Press Stereo Link to link channels 1 and 2 into a stereo channel for monitoring stereo sources such as keyboards etc.

Input Section - Digital

To process an external digital signal it is imperative that Konnekt is able to lock to this signal. The lock status is indicated in this section:



4 One of the below indications will appear:


Lock

Konnekt is locked correctly to an external source.

No Ref

Konnekt cannot lock to an external digital signal. Konnekt automatically switches to the internal clock.

5 Digital Input options

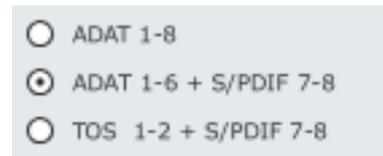

ADAT 1-8

All digital channels are reserved for ADAT channels 1-8.

ADAT 1-6 + S/PDIF 7-8

ADAT channels 1-6 is combined with the two digital channels available on coaxial S/PDIF.

TOS 1-2 + S/PDIF 7-8

This setting allows for 2 channels of optical S/PDIF (TOS) along side 2 channels of coaxial S/PDIF on the coax (phono) connections.

SETUP PAGE

6 Mixer View - (digital)

The Mixer View function gives you a few options regarding the appearance of the digital channels on the Mixer page.

Hide

Digital channels are not shown on the mixer page.

Show

Digital channels are always shown on the mixer page.

Autoshow

Digital channels are only shown on the mixer page if a valid digital signal is present on at least one of the digital inputs.



Monitor Mix

7 Light Ring Assign(ment)

The LED light-ring around the SOURCE level knob indicates the source level of the channel you have selected. Using the Ch Select button on the front panel you can select between:

- Adat 1+2 / optical s/pdif
- Adat 3+4
- Adat 5+6
- Adat 7+8 / coaxial s/pdif
- DAW main
- Fabrik R Level / Decay
- Mixer level / dim level


8 Linked Devices

Up to four Konnekt units can be connected. You will most likely only monitor the physical outputs of one of the units. E.g., - you have only connected the outputs of one of your Konnekts to your active speakers, right?


However, with the Linked Devices option you can monitor any input of any Konnekt unit in the system thru the same outputs.

Example:

In the screenshot below we have 2 units in the system. If a third or fourth Konnekt was in the system - these would appear below also.

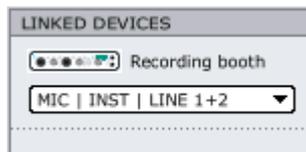

We have labeled the two Konnekts “Control Room” and “Recording booth”. The “Control Room” unit is the unit we have connected to our active speakers, but we would like to listen to the Mic/Inst front panel inputs on the “Recording booth” unit. This is what we have selected via the drop-down menu.

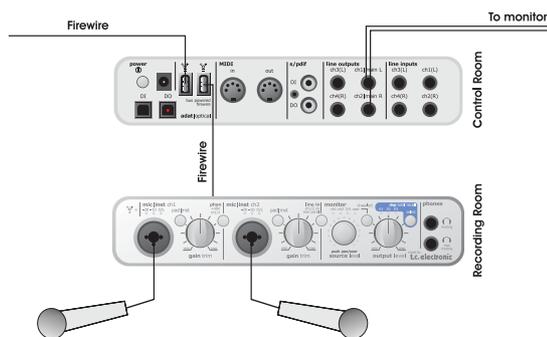

9 Mixer View



Show


Determines whether the link channels should appear on the mixer page.

Stereo Link

Press to stereo-link the link channels on the mixer page.

Output

In this section of the Setup page you set up signal routing to the Konnekt outputs.

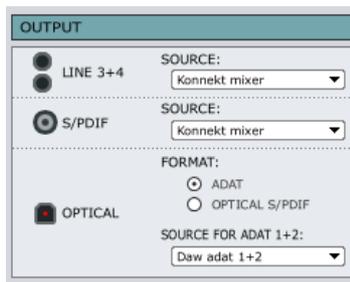

10 Source for Line 3-4 & S/PDIF outputs

DAW

When DAW is selected, the signal from your HD recording application (e.g. Cubase) is routed to the outputs. (Daw Line 3+4, Daw optical s/pdif, Daw adat or Daw coaxial s/pdif).

Mic/Inst/Line

This is the option to use if you want to route the signal present on the Mic/Inst/Line connections on the Konnekt front panel to the outputs.

Konnekt Mixer


When Konnekt mixer is selected the main out signal from the Konnekt mixer page is routed to the outputs.

Mixer Send Knobs

On the Konnekt mixer you have the option of sending a signal to the Fabrik reverb *), using the channel send knobs.

However, you may choose to route the send to any of the routable outputs (all outs but main outs, which are always set to listen to the Konnekt mixer). This is great if you want to use an external effect with your monitor mix.

Example: External effect using s/pdif

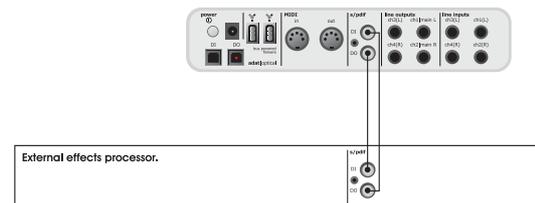

11 OPTICAL outputs (Konnekt 24D only)

ADAT

Select ADAT to send up to 8 ADAT channels on the lightpipe out connection.

OPTICAL S/PDIF (TOS link)

Select OPTICAL S/PDIF to send 2 channels of optical S/PDIF to the lightpipe out connection (TOS link).

SOURCE

Same options as with the Line3+4 and S/PDIF output sources.

*) Konnekt 24D only

SETUP PAGE

Stand Alone Clock Settings



STAND ALONE CLOCK SETTINGS	
SYNC SOURCE	Internal
SAMPLE RATE	44.1 kHz

These settings handle the clock settings when Konnekt operates as a stand-alone unit. For changed settings to take effect: power off - power on.

12 Sync Source options

Internal:

Konnekt will sync to its internal clock and disregard the clock present on the digital inputs.

S/PDIF:

Konnekt will attempt to lock to the digital signal present in the S/PDIF DI connection.

Optical:

Konnekt will attempt to lock to the digital signal present in the ADAT/optical input connection.

13 Sample Rate


Options are:

44.1 kHz	Both Fabrik R and Fabrik C available*
48 kHz	Both Fabrik R and Fabrik C available*
88.2 kHz	Fabrik R <u>or</u> Fabrik C available*
96 kHz	Fabrik R <u>or</u> Fabrik C available*
176.4 kHz	Fabrik R and Fabrik C not available*
192 kHz	Fabrik R and Fabrik C not available*

* No effects included in Konnekt 8.

DSP Effects Settings

(Konnekt 24D only)

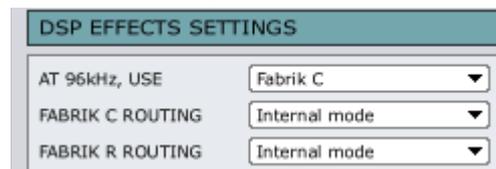

DSP EFFECTS SETTINGS	
AT 96kHz, USE	Fabrik C
FABRIK C ROUTING	Internal mode
FABRIK R ROUTING	Internal mode

14 At 96kHz, USE

At 96kHz (and 88.2) it is not possible to run both the Fabrik C and the Fabrik R plug-ins. Select either Fabrik C or Fabrik R.

15 Fabrik C

Select between:

* Internal mode

- If you want to run the Fabrik C as internal effect of the Konnekt mixer.

* Computer s/r stereo

- If you want to run the Fabrik C as a stereo send/return effect to/from your host application such as Cubase.

* Computer s/r dual mono

- If you want to run the Fabrik C as two mono send/return effects to/from your host application such as Cubase.

16 Fabrik R

Select between:

- Internal mode

- Computer s/r stereo

What routing should I choose?

The are two main situations that calls for different routings. Recording and Mixing. In this section we will look at both and use Cubase LE and Cubase SX as host applications.



Please notice that for the following example we have nicknamed the used Konnekt unit; "K24D". The nickname is set in the Setup page.

Recording - use internal mode

In the typical recording situation you wish to:

- Monitor the source with no latency.
- Record the source signal. Either dry or processed via the Fabrik C channel strip or both of them simultaneously.

Normally when working with a microphone and a standard pre-amp you will add slight compression and EQ from the pre-amp and record this signal only. However, with Konnekt it is very easy to set up and record two individual tracks simultaneously; one unprocessed and one processed.

- Listen to the Fabrik R reverb on the source signal as "cue reverb" without recording the reverb.

This is set up the following way:

- Select "Internal" mode for both Fabrik C and Fabrik R on the Setup page.



Fabrik C Routing

- In the DAW VST Input section you may select which input or inputs to record. This is where you select whether you record the dry source signal or the source signal processed through Fabrik C, - or both!

The following example is from Cubase LE




Fabrik R Routing

As opposed to Fabrik C, Fabrik R will be typically be used as a send effect from the host application. This means that you will listen to the effect while recording but not actually record the reverb.

- Go to the VST inputs and select e.g. Konnekt 24D mic/inst/line 1 to select the frontpanel input 1. Activate the input pressing the "power-button".



- Go to the Mixer page in the TC Near control page. Send to Fabrik R from ch. 1 using the send knob and adjust the Fabrik R main mix level.

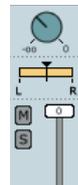

Fabrik R send level for channel 1.



Fabrik R return level for channel 1.

That's it.

ROUTING MODES

Mixing - use computer S/R mode

The typical object when mixing with Konnekt is to add the Fabrik R reverb as a send effect to your tracks and maybe compress one or more tracks further using Fabrik C.

This is set up the following way:

- Select “Computer S/R stereo*” mode for both Fabrik C and Fabrik R on the Setup page.



* Fabrik C can also be applied in dual mono mode if required.

Fabrik R


For Cubase LE follow the description on page 8 called: “Using Fabrik R as a Send effect”.

Fabrik C as an insert effect

If you are using Cubase SX go straight to the Cubase SX section. Setting this up in Cubase LE is done in a slightly different way.

Cubase LE

Go to Devices - Device Setup - VST Multitrack and make sure that Direct monitoring is not ticked.

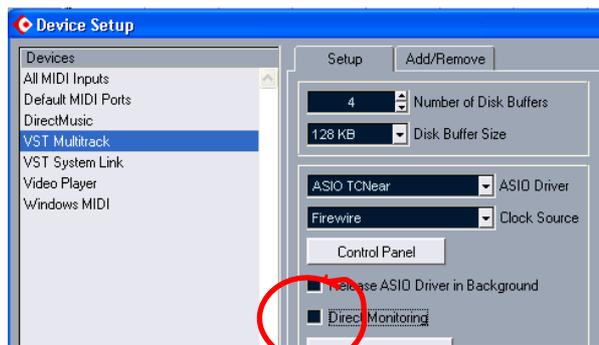

- Go to Devices - VST Inputs and activate “K24D fabrik channel L/ K24D fabrik channel R”.



- Now go to VST outputs and activate a bus using the “power-button”. We have renamed the bus “Fabrik C”. (see below)
- Also set the output to “K24D fabrik channel”.
- Bus 1 is set to send on K24D line1.



- Go to the project window.



ROUTING MODES

- In the example (see previous column) we have a track with a stereo audio file. The track we have renamed “Source”. This is the track we would like to process through Fabrik C.
- Below we have created an additional audio-track. This is the track we will monitor through. We have renamed the track “Fabrik C out”.
- Make the “Fabrik C out” track stereo by pressing the mono/stereo button.



- Activate the monitor symbol on the “Fabrik C mon” track.



- Set “in” to IN 5+IN 6.
- Set “out” to BUS 1.



To easily switch between recording and monitoring, setup P1 and P2 as recording and monitoring programs. You can then switch between these programs using the DSP select button on the front panel.



ROUTING NOTES

Cubase SX

Cubase SX, Logic Pro and other major DAW programs, provide features that make it easier to set up the Konnekt Fabrik effects as external effects.

In the following example the object is to process through Fabrik C in a mixing situation.

- On the TC Near control panel; Setup page - DSP Effects section, set Fabrik C routing to “Computer s/r stereo”.



- In Cubase SX go to: Devices - VST connections - External effects. Add External effect and rename this to Fabrik C. As Fabrik C is assigned FW ports 5-6, set Device ports to 5 and 6 for both send and return busses. It should now look like this:



- Go back to the project window. Select the audio track you wish to process through the Fabrik C.
- Select External effects - Fabrik C insert for the track.



- Activate the effect by pressing the “power-button” and press the “e” (if you like) to open the gain settings for the insert point.

Your screen should now look similar to this:



Now the audio file playing on the Source channel is processed through Fabrik C.

- Open the Fabrik C page from the TC Near control panel and you will see the signal being processed according to your settings.

WDM handling (Windows only)

WDM is Windows' audio driver system, and is used for Windows sounds, media player and other applications that don't support ASIO. Also applications such as PowerDVD uses WDM as audio driver system.

With the current version of the Konnekt software, you can use two WDM input channels - and two WDM output channels. The input channels are fixed to "mic/inst/line in 1 and 2" - and the output channels are fixed to Main Outs L and R.

Setting up


To use Konnekt with WDM, you need to tell Windows that this is your intension.

Go to:

Control Panel/ Sounds and Audio Devices
Properties/Audio

Select "TCNear WDM Audio" for both Sound playback and Sound recording.

Konnekt is able to handle both WDM and ASIO at the same time. If you wish, you can listen to background music from your media player or watch a DVD movie while working with your audio application at the same time.

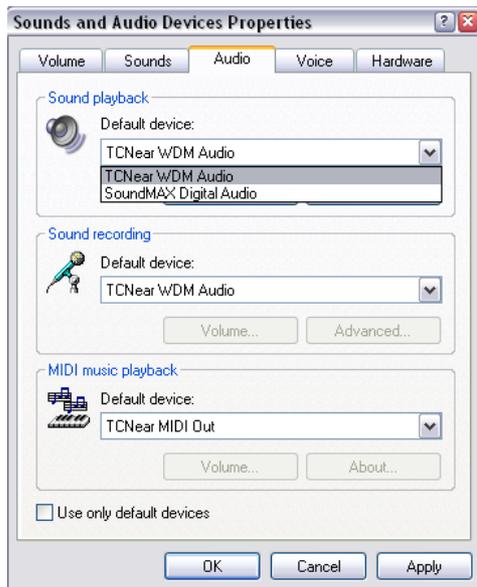

SYSTEM SETTINGS

Access the System Settings page by pressing:

TC NEAR CONTROL PANEL

RECORDING BOOTH CONTROL ROOM **SYSTEM SETTINGS**

#BUFFER SIZE

#BUFFER SIZE: 256 SAMPLES LATENCY: 5.8 ms

CLOCK

SETTINGS	STATUS
CLOCK MASTER: Control room	INTERNAL LOCK
SYNC SOURCE: Internal	
SAMPLE RATE: 44.1 kHz	
ACTUAL SAMPLE RATE: 44100 Hz	

VERSIONS

TC NEAR CONTROL PANEL: 1.0.0 f82
TC NEAR 1394 FIREWIRE DRIVER: 1.0.88.0

CHECK FOR UPDATES

t.c. electronic

1 2 3 4 5

Buffer Size*

- 1 The buffer size can be set from 64 to 8192 samples. The higher buffer setting, the longer latency through Konnekt. The default buffer size is set to 256 samples. You should only increase the buffer size if you experience problems such as clicks and pops in the sound.**

* Relevant for PC version only. On Mac computers buffer size is set in audio application. For instance in Logic Pro go to: Audio/Hardware drivers to set the buffer size.

** Clicks and pops in the sound may also derive from clock problems. These should be resolved first.

Clock

2 Clock Master


With the Clock Master parameter you select which of the Konneks in your setup units that will act as System Clock Master.

In a digital setup, it is important that all connected devices run at the same sample rate. The Clock Master device defines this sample rate, and distributes a digital clock based on this sample rate to all devices in the setup. There can be one, and only one clock master in a digital setup, and you cannot select your computer here; the clock master device is always your audio interface. However, the Clock Master device may sync to an external device. See "Sync Source" below.

3 Sync Source

The Sync Source parameter determines to which the device the Clock Master should sync. The DICE II FireWire chip provides excellent clock and in many setups it the "internal" option is the best choice. However, you may sync to any digital device attached to the Konnekt digital inputs and enjoy the outstanding JetPLL jitter rejection technology also provided by the DICE II.

Example 1 - Konnekt as Clock Master: Setting Clock Master and Sync Source.

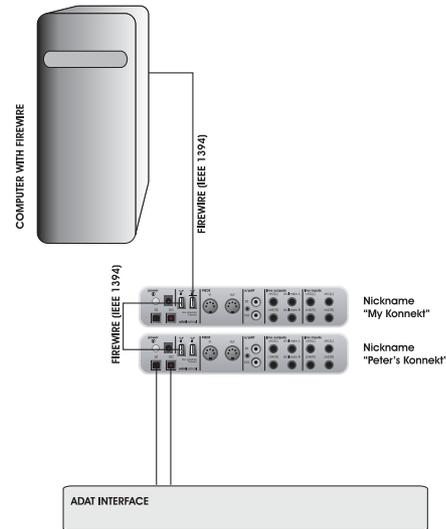

- The setup consists of 2 Konnekt units connected via FireWire, a computer and an ADAT interface.
- We assigned the nick-names "My Konnekt" and "Peter's Konnekt" to the two Konnekt units. (nick-names are set on the Setup page).


The intention is to sync the entire setup to the ADAT interface.

- Set **Clock Master** on the System Settings page to "Peter's Konnekt" as this is the physical Konnekt unit that will determine the clock master.
- Set **Sync Source** to ADAT as this is the connection on the Clock Master unit that you would like to sync to.

That is basically it. The **Sample Rate** should only be set if Internal Clock source is selected.

SYSTEM SETTINGS


Example 2: Konnekt Jitter Rejection

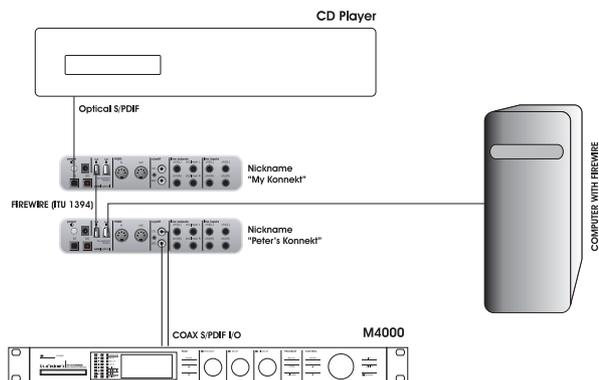

In this setup we have a CD player in the system. CD players are in terms of digital clock uncontrollable and can in only act as masters.

Thanks to the DICE II FireWire chip with integrated JetPLL jitter rejection technology, Konnekt24D/8 provides you with a very high clock quality. Not only does Konnekt provide a high quality clock but the excellent jitter-rejection facilities will clean up a digital signal from an external source.

- The CD player is connected to “My Konnekt” via optical S/PDIF.
- “My Konnekt” is selected as Clock Master on the System Settings page and Sync Source is set to Optical S/PDIF.

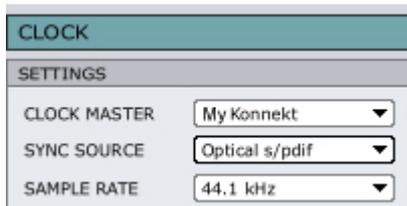

- The M4000 is connected to the other Konnekt in the setup (Peter’s Konnekt) and it is set to slave to “external”.

4 Sample Rate

If Sync Source is set to “Internal”, the sample rate must be set. The options are:

- 44.1 kHz
- 48 kHz
- 88.2 kHz
- 96 kHz
- 176.4 kHz
- 192 kHz

The sample rate is typically set by your host application (e.g. Cubase LE).

If you e.g. play a 44.1 kHz project the sample rate automatically shifts to 44.1 kHz. If you later load and play a 48kHz song, the sample rate shifts to 48 kHz. Though Konnekt receives information about the sample rate it still provides the actual digital clock.

5 Lock Status

Various lock status indications can be given:

Internal Lock

Indicates that the system is locked to the Konnekt unit set as clock master.

External Lock

Indicates that the system is locked to an external digital device connected to the Konnekt set as clock master.

No Reference

External sync on the Konnekt set as master is unobtainable. Check connections and external device.

SYSTEM SETTINGS & FIRMWARE UPDATE & RESET TO DEFAULT

Versions

This section gives information on Control panel versions and FireWire driver. (see page 36)


Check for updates

- If the computer is connected to the Internet you may check for updates by pressing “CHECK FOR UPDATES”. You will be directed to the Konnekt product page at www.tcelectronic.com
- Press “Click here to download the latest version” and download the full installer.
- Run the installer.

Updating firmware


- Once the installer is run (see above), the latest version of firmware is placed in the TC Near folder on your hard disk.
- You will now need to update the firmware for each konnekt unit in the setup.
- Go to the “About page” for the unit you wish to update.

Example

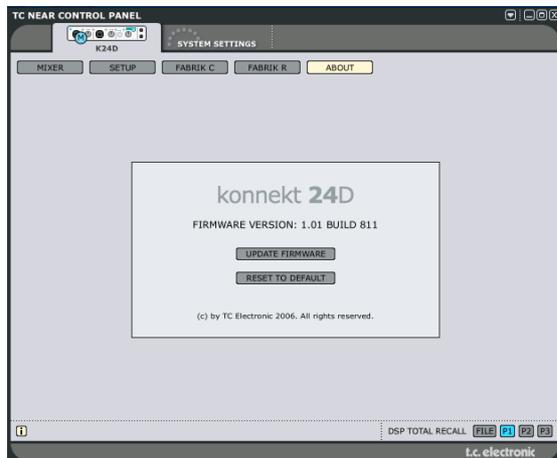

- Press UPDATE FIRMWARE and you will be directed to the folder where the firmware is located.

Example

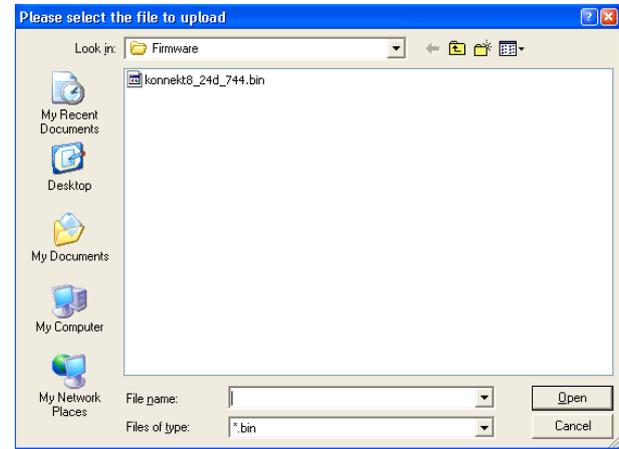

- Select the “xxx.bin” file with the highest number. This is the latest released firmware.
- Now press “Open” and wait while the firmware is being updated.

Reset to Default

The Reset to Default function will reset the selected Konnekt unit to factory default settings for the currently loaded software.



The software will not be degraded to previous software versions and no presets are affected.

FABRIK C

Introduction

Fabrik C is based on the innovative Meta Intuitive Navigation Technology (MINT™) that redefines the way you use professional audio plug-ins for professional results. We have integrated a simple yet highly effective and intuitive approach to working with audio, and the result is a user-interface with few handles that are effective but simple to use. Often people think that if you want to create professional results the process has to be tedious and complex – we don't agree. The Fabrik plug-ins introduce a new way of working with audio, and they build on proven and award-winning TC technology, ensuring the highest level of audio quality.

Fabrik C is a full-blown channel strip plug-in with EQ, De-Esser, 3-band Compressor and Limiter in one single plug-in. With MINT™ you have total control of all the parameters, using only a few dedicated knobs. The EQ section is a 4-band parametric EQ with high/low-pass filters – choose between 4 different filter types. Based on no-nonsense design, the De-Esser is controlled using a single fader.

With a built-in 3-band intelligent compression technique the Compressor is not only one of the best compressors available, - it also gives you the means to avoid bad side effects compared to traditional compression. Combined with the Limiter the compression section can be used in a musical way without worrying about overshoots.

Main features

- Built-in MINT™ (Meta Intuitive Navigation Technology)
 - Three main sections with TC technology: EQ, de-esser and compressor
 - Intuitive and easy control of dedicated parameters – Instant gratification
 - 4-band parametric EQ
 - Scalable de-esser
 - 3-band/full band compressor
 - Limiter
 - Control multiple parameters with few knobs
 - 48 bit double precision
-
- **Access the Fabrik C channel strip by pressing the Fabrik C tab.**



Overview



Full-band or 3-band compression?

Fabrik C includes both a 3-band and a Full-band compression mode. As Fabrik C is a plug-in that is designed to be used on single sources and not as a dedicated mastering tool you might wonder how the 3-band mode applies.

An overall “rule of thumb” is that if you are working with a source that has a wide frequency range with large peaks in specific frequency areas, you are most likely best off using the 3-band mode. If, on the other hand you’re working with audio that is within a small frequency area, such as e.g. a trumpet section or background vocals, you’ll obtain a great advantage using the Full-band mode.

Let us look at a few specific application scenarios to give you an idea of what can be achieved with the different compression styles.

3-band compression on Bass

If you are to do a 3-band compression on a bass, this will allow the higher frequencies to pass through, while adding compression to lower frequencies. What this gives you is better control and longer sustain, and a more punchy bass with all the overtones intact.

FABRIK C

3-band compression on grouped sources

If you have grouped several sources and want to do a “global” compression on this section, the 3-band mode can be very effective. It will give you more transparency in your overall mix as you can apply independent compression to each of the three frequency bands.

Full-band compression on vocals

You probably know that “in-your-face” airy kind of vocal that you hear on some tracks? The way to get that effect is by using a full-band compressor on your vocal track, slowing the attack time, and speeding up the release time. It's pretty simple when you know how to do it.

Full-band compression on Guitar

It's amazing how some tonal instruments can get a very percussive quality to them when the right type of effect is applied. Using a full-band compressor on a rhythm guitar will give you a sound that is sharp, sweaty, funky and really emphasizes the rhythmic and percussive qualities of your track.

Limiters

The Limiter is used to prevent overloads occurring at extreme and occasional peaks in the source material, - peaks that may not be caught and attenuated sufficiently in the Compressor. As the Limiter can be used to limit the extreme, the Compressor can be used to apply a much more “musical” and gentle compression.

EQ Section

The Fabrik C EQ section is a 4-band parametric EQ that gives you full control of high- and low-pass filters. Four filter types are available offering Notch, Parametric, Shelving and Cut. If you are looking for a razor sharp filter, use the Notch filter which has a range as low as 0.01 of an octave. For a more gentle approach go for the shelving filter that sports a variable slope with a range from 3dB/oct over 6 and 9 to 12dB/oct. The Cut filter can be switched between a flat amplitude maximum of 12dB to an octave, and a flat group delay type. For a natural and “well behaved” bandwidth, apply the parametric EQ.


De-Esser

A De-Esser is a compressor type used to reduce only specific sibilant frequencies. Typically the “s” sounds can be far too dominant on a vocal track and the track would therefore often benefit from being processed by a De-Esser.

Headroom


To avoid internal clipping and to secure ease of use, all processing is done in the 48 bit domain, and is not truncated to 24 bit before the output of the Limiter.

Signal Flow - 3-band mode

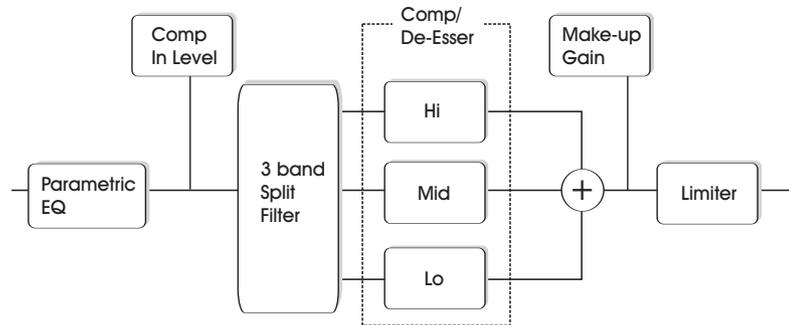

This is a schematic overview of the signals flow through the algorithm in 3-band mode. As illustrated - the signal first passes the 4 band parametric EQ. Then the signal is split into lo-, mid- and hi-bands for individual compression. Cross-over frequencies between the bands are set by the selected Source type. After the Make-up Gain section, the signal passes the Limiter.

Signal Flow - Full-band mode

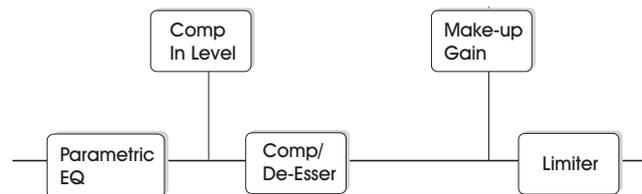


The signal flow in Full-band mode is similar to 3-band mode. The difference lies solely in the Full-band compression as opposed to the split-filter and 3 compression bands found in 3-band mode.

FABRIK C

EQ section

The Fabrik C EQ section is a 4-band parametric EQ with four selectable filter types: Notch, Parametric, Shelving and Cut. If you're looking for a razor sharp filter, use the Notch filter that has a range as low as 0.01 octaves. For a more gentle approach the shelving filter with a variable slope is a better choice. Cut filters can be switched between a 12dB/oct maximum flat amplitude (Butterworth) and a flat group delay type (Bessel). Mark the handle (1, 2, 3 or 4) for the band to adjust. Set the BW/Type, then grab the handle again and move for frequency/gain adjustments.

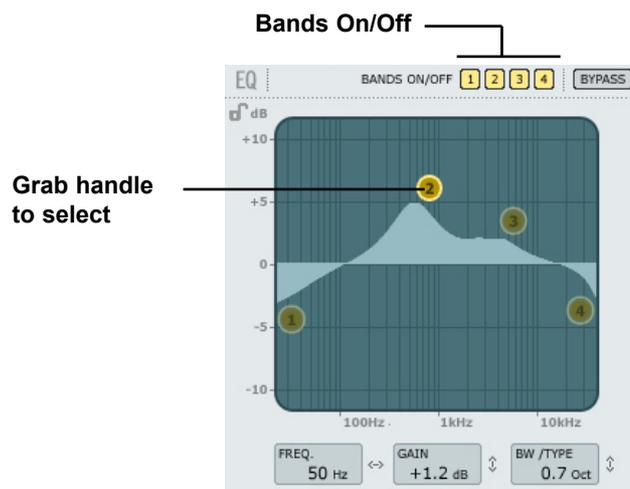

Bands On/Off

Click to activate/deactivate the four individual bands.

Adjusting Frequency and gain

Simply grab the symbol for one of the active bands (1, 2, 3 or 4) using the left mouse button and move until desired settings are achieved.

Adjusting BW/TYPE

First select a band. Then place the cursor within the BW/Type field, press left mouse button and move mouse up/down to change type and bandwidth. Different types of filters are available for the Low, Mid and High filters. Please refer to the following pages for overview of the EQ types.

Bypass


Press to bypass the EQ section.

Filter types


For Lo and Hi filters select between filter types: Parametric, Notch, Shelve and Cut.

For Mid 1 and Mid 2, select between filter types: Parametric and Notch.


Parametric Filter - Broad type

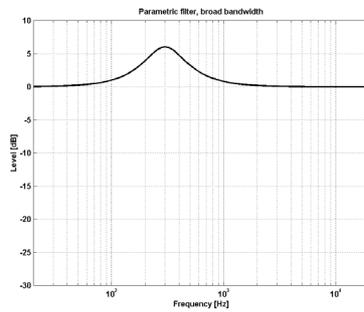


Shelving Filter

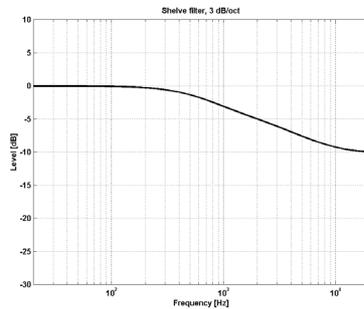


Notch Filter - Narrow type

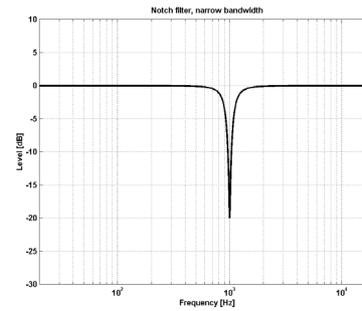

Cut Filter - Bessel type

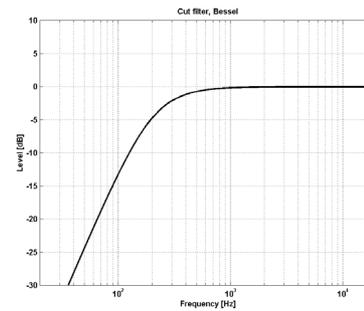

Cut Filter - Butterworth type

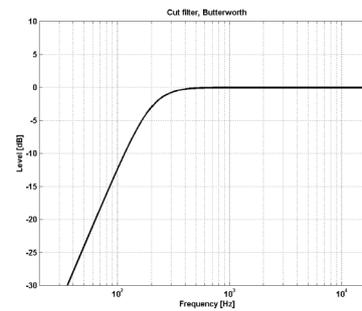

FABRIK C

Type

Range for the Notch filter:

Lo Gain : -inf; -97dB to 0dB
Mid1 Gain : -inf; -97dB to 0dB
Mid2 Gain : -inf; -97dB to 0dB
Hi Gain : -inf; -97dB to 0dB

Range for the Notch filter:

Lo BW : 0.01oct to 1oct
Mid1 BW : 0.01oct to 1oct
Mid2 BW : 0.01oct to 1oct
Hi BW : 0.01oct to 1oct

Range for the Parametric filter:

Lo BW : 0.1oct to 4oct
Mid1 BW : 0.1oct to 4oct
Mid2 BW : 0.1oct to 4oct
Hi BW : 0.1oct to 4oct

Range for the Shelve filter:

Lo BW : 3dB/oct to 12dB/oct
Hi BW : 3dB/oct to 12dB/oct

Range for the Cut filter:

Lo BW : Bessel or Butterworth
Hi BW : Bessel or Butterworth

Bandwidth/Q - Key-Values:

BW	Q
0.5 -	2.87
0.7 -	2.04
1.0 -	1.41

Freq

Range - Lo band : 20Hz to 20kHz
Range - Mid1 band : 20Hz to 20kHz
Range - Mid2 band : 20Hz to 20kHz
Range - Hi band : 20Hz to 40kHz

Gain

Select the band, click on the Gain field then drag the mouse vertically to change the value.

Range for the Parametric and Shelve types:

Lo Gain : -12dB to +12dB
Mid1 Gain : -12dB to +12dB
Mid2 Gain : -12dB to +12dB
Hi Gain : -12dB to +12dB

Compression

3-band and Full-band modes - Source page



Source Selection

Use the Source page to select which type of material you are processing.

- Grab the “S” and move the icon in vertical and horizontal directions to select the source-type best matching your source material.

Each type selects a carefully tuned combination of the essential compression parameters: Attack, Release, Threshold and Ratio.

For Vocals:

Female Vocal, Male Vocal, Speak, Choir

For Instruments:

Guitar, Piano, Horns, Bass

For Percussive material:

Kick, Snare, Perc, Kit

For full-range material:

Mix Rock, Mix soft, Mix Acoustic, Mix Purist

Compression

3-band and Full-band modes

Gain page



Gain Control

The Gain settings are very important.

The higher set In Gain the harder the signal meets the Compressor Threshold.

- Grab the “G” and move the symbol in vertical and horizontal directions to set both In Gain and Make up gain with just one handle.

The Threshold is automatically set when the Source type is selected, however, the Gain parameters determine how hard the signal meets the Threshold.

Depending on how the Compressor parameters are set, the level will change. The Make Up Gain parameter is used to compensate for this level change.

In Gain Range: -18 to +18dB

Make Up Gain: -18 to +18dB

FABRIK C

Compression

3-band mode only
Compressor Control page



Compressor control

The Low, Mid and High parameters indicate the set compression amount for the three bands.

- Grab the “C” and position this icon freely within the triangle to distribute the amount of compression on the three bands.

If the compression should primarily be on the low end frequencies move “C” in that direction. Likewise with the Mid and High areas.

Where the Gain parameter is used to gain the input of the Compressor and also set the Make-up gain on the output, the Compression Control adjusts the individual compression amount on the three bands.

Compression

3-band mode only
Level page



Level Control

Depending on the amount of applied compression you may need to level compensate the three individual bands.

- Grab the “L” and position this handle freely within the entire triangle.

Where the Make-up Gain function on the Gain page is used as a general level compensation on the entire signal, the Level control can be used to set the level of the three bands individually.

Compression

- Full-band mode

The Compressor is in Full-band mode when “3-band” is not marked.



In 3-band mode the Compression Control “C” and the Level Control “L” handle the distribution of compression and Level between the 3 bands. In Full-band mode these controls are redundant and not available. In Full-band mode only Source select “S” and Gain “G” apply.


See pages 6-7 for application examples of the Full-band mode.

Adjusting Parameters - Compressor section

As described in the previous section the parameters on the 4 Compression pages are adjusted simply by grabbing and moving the “S”, “G”, “C” and “L” handles - however, a few extra cool features are available.

Grid

On the Source pages the “S” handle moves in vertical and horizontal directions only, but on the Compression Control, Level and Gain pages the “C”, “L” and “G” handles move freely in all directions. You may, however, see the advantage of moving the handle in one direction only. Therefore it is possible to lock a direction in a “grid”.

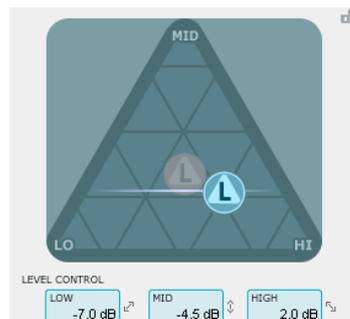

- Grab the “C”, “L” or “G” handle using the left mouse button.
- Press and hold the Alt key (Mac: Command key), while moving the mouse in a circle. The “compass” function is now active and you can select one of 2 to 6 directions.
- Release the Alt key (Mac: Command key) and move the mouse still holding the left mouse button pressed to select desired values.
- Release mouse button to release the grid.

FABRIK C

The Limiter



Fabrik C also holds a Limiter. The Limiter is used to prevent overloads occurring at extreme and occasional peaks in the source material, - peaks that may not be caught and attenuated sufficiently in the Compressor. As the Limiter can be used to limit the extreme, the Compressor can be used to apply a much more “musical” and gentle compression.


Threshold

Range: -12dB to 0dB

The Threshold sets the max amount allowed to pass through the Limiter.

We recommend a setting of -0.1dB as maximum.

De-Esser

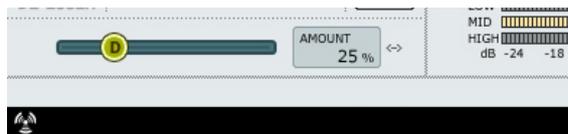

A De-Esser is a compressor type used to reduce only specific sibilant frequencies. Typically the “ss” sounds can be far too dominant on a vocal track and the track would therefore often benefit from being processed by a De-Esser.

The De-Esser also comes in handy when working with background vocal tracks with many voices dubbing the “s”-sounds from the lead track.

The De-Esser works in both 3-band and Full-band modes.

Bypass

Use Bypass to activate or deactivate the De-Esser.

Amount

Range: 0 to 100%

While listening, move the slider from left to right set appropriate amount of de-essing. A De-Esser reduces certain high-end frequencies and you should not set the Amount parameter higher than necessary.

Routing

The routing options for Fabrik C can be set both on the Setup page under DSP EFFECTS SETTINGS and on the Fabrik C page itself.

The options are:

- Internal
- Computer s/r stereo
- Computer s/r dual mono

Please see further descriptions of these routing modes in the manual section describing the Setup page.



FABRIK R

Introduction

Fabrik R is based on the innovative Meta Intuitive Navigation Technology (MINT™) that redefines the way you use professional audio plug-ins for professional results.

Fabrik R combines four TC Reverb algorithms in one single plug-in. Thanks to the Meta Intuitive Navigation Technology (MINT™) it is a breeze to find the sound you are looking for. If you want to apply a “live” vibe to your vocals and instruments, use the Live Reverb. For vocals that need a “larger” quality, choose the Hall Reverb. For that sound of the past and for drums and percussion, apply the Plate Reverb. If you’re working with guitars try the Club Reverb, which also works great with vocals. Within each reverb you’ll find it very easy to adjust any setting to your own liking. You won’t waste time with nitty-gritty preset adjustments - all you really have to worry about is using your ears.

Main features

- Built In MINT™ (Meta Intuitive Navigation Technology)
 - Four new TC reverbs: FabrikLive, FabrikHall, FabrikPlate, FabrikClub
 - Intuitive and easy control of dedicated parameters – Instant gratification
 - Exceptionally good for vocals, drums & percussion, and instruments
 - Perfectly emulates that illustrious “live” ambience
 - Control multiple parameters with few knobs
 - 48 bit double precision
-
- **Access the Fabrik R channel strip by pressing the Fabrik R tab.**



Overview



Reverb section

- Select one of the 4 Reverb types using the left mouse button.

Live

Live recorded audio sources sometimes have a lot of background noise. A very smooth discrete reverb on such a source will often be almost in-audible. What you need is a brighter and grainier reverb for that type of audio material, and the Live reverb is perfect for that job. Try medium to long decay times and have a listen.

The Live reverb type also does wonders for vocals or instruments that need a clear and to the point reverb. Try it on different material and you'll be surprised with the results.

Hall

Often you're concerned about preserving the natural characteristics of your source material, and reluctant to apply "large" reverbs. Don't worry, the Hall reverb will preserve your audio and add a large hall effect giving you lots of natural sounding "space". For most vocal material this reverb is superior to many other reverbs and will be an excellent choice for various studio applications.

FABRIK R

Plate

Welcome back in time! In the old days reverberating springs or large metallic plates were used to create a reverb effect. The Plate reverb emulates this characteristic type of reverb. If you're working with a recording of percussive instruments, it will often call for a diffuse, bright and light reverb, and the Plate is just perfect for that job.

Club

This reverb could be exactly what the doctor ordered if you want to put extra focus on the guitar or the vocals. It emulates a medium sized club, giving a broad yet intimate feel to your audio material. If you've got a recorded guitar that cries out for reverb, but you don't want the "stadium rock" sound, the Club reverb will do the trick, well, that goes for vocals and horns too.

Tweak section

In this section, all parameter adjustments are made. Parameters are organized in 4 different layers/pages.

R - Reverb

C - Color

M - Modulation

D - Distance

There are a couple of different ways of altering the parameter values:

- First, select parameter by placing the cursor on one of the above-mentioned icons ("R", "C", "M" or "D") and click. Then - grab the icon and drag in any direction. This way of changing parameter values gives an excellent intuitive feeling.
- You can of course also change parameter values by grabbing the parameter value fields and drag the mouse up or down.
- Finally, values can be entered numerically by double-clicking on the parameters value fields and entering values using the keypad.

Meters

The adjacent list shows the exact distribution of value readings on the meter segments on both IN and OUT meters. A precise reading close to 0dBFS and around key values such as -18, -20 and -24dBFS is imperative and this distribution takes these key values into consideration.

O/L - Overload indication

Internal overload is indicated via the O/L indicators located between the In/Out meters. Internal overload may occur at certain extreme parameter settings even when the In Level meters show reasonable levels. Use the In/Out parameters to compensate.

0 dBFS	-16
- 0.5	-18
-1	-20
-2	-22
-3	-24
-4	-30
-5	-36
-6	-42
-8	-48
-10	-56
-12	-64
-14	-72

Reverb page



Decay

Range: 10ms to 20s

The Decay parameter determines the length of the Reverb Diffuse Field. The length is defined as the time it takes for the Diffuse Field to decay approximately 60dB.

PreDelay

Range: 0 to 100ms

A short Delay placed between the direct signal and the Reverb processing. A Pre Delay is often used to keep the source material clear and undisturbed by the Reverb Diffuse Field.

Modulation page



The algorithm designers have adjusted the diffuse field part of the reverb to be as smooth and natural sounding as possible. However, by modulating the diffuse field, the reverb will, in certain cases, integrate better with the entire signal. You may also find the modulation parameters useful simply to create new flavors of reverb.

Modulation Rate

Range: +/-25

Adjusts the Rate of modulation.


Modulation Depth

Range: 0 - 200%

Adjusts the Depth of modulation.

FABRIK R

Color page

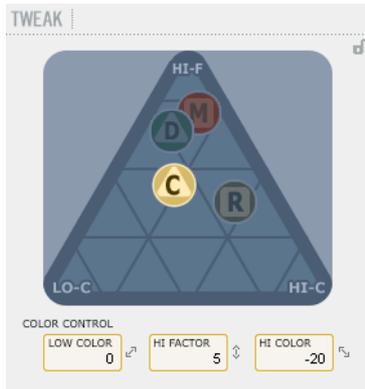

The Color parameter controls are advanced controls handling the sonic spectrum of the Reverb diffuse field. Try adding a bit of HiColor if you feel the level of reverb is correct, but still doesn't stand out as intended.

LoColor

LoColor adjustment of the Decay.


HiColor

HiColor adjustment of the Decay. This parameter selects frequency area in focus.

HiFactor

The HiFactor parameter is used to enhance or attenuate the frequency area set by the HiColor parameter.

Distance/Level page

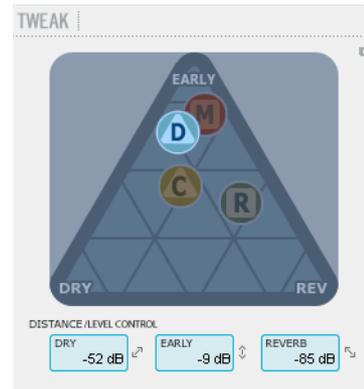

The relation between Dry, Early and Reverb levels defines the perceived distance of a source. The less dry the signal compared to Early and Reverb levels, the greater the perceived distance. Early and Reverb levels set the relation between the amount of room definition compared to the reverb diffuse field.

If the Kill Dry button is pushed, Dry Level is fixed at off. If the Kill Wet button is pushed, Early and Reverb Levels are fixed at off.

Dry

Range: Off, -24dB to 0dB

Sets the amount of dry level passing through the algorithm.

Early

Range: Off, -24dB to 0dB

The Early Reflections are the defining basis of the Reverb diffuse field. Adjust the amount to set the emphasis between the Early Reflections and the Reverb diffuse field.

Reverb

Range: Off, -24dB to 0dB

The Reverb parameter sets the amount of applied reflections from the Reverb diffuse field.

Additional parameters

Bypass

Bypass function for the entire plug-in.

In/Out

In level Range : -24 to 0dB

Out level Range : -24 to +12dB

Sets the Input/Output levels for the algorithm. If the Internal overload indicators “O/L” are lit, you may need to readjust the In/Out levels.

Meters

In and output meters. For best performance the In meter should show as close to 0dB as possible without clipping.

Kill Dry - Kill wet

A reverb can be used either as an insert effect or as a send effect.

Most often it is used as a send effect on a bus. The bus is fed from the channels you apply the effect to. When used as a send effect the Kill Dry should be set to “on” and this is also the default setting. When used as an insert channel, dry signal is necessary and Kill Dry should be set to “off”.

Routing

The routing options for Fabrik R can be set both on the Setup page under DSP EFFECTS SETTINGS and on the Fabric R page itself.


The options are:

- Internal
- Computer s/r stereo
- Computer s/r dual mono


Please see further descriptions of these routing modes in the manual section describing the Setup page.



APPENDIX - SIGNAL FLOW KONNEKT 24D

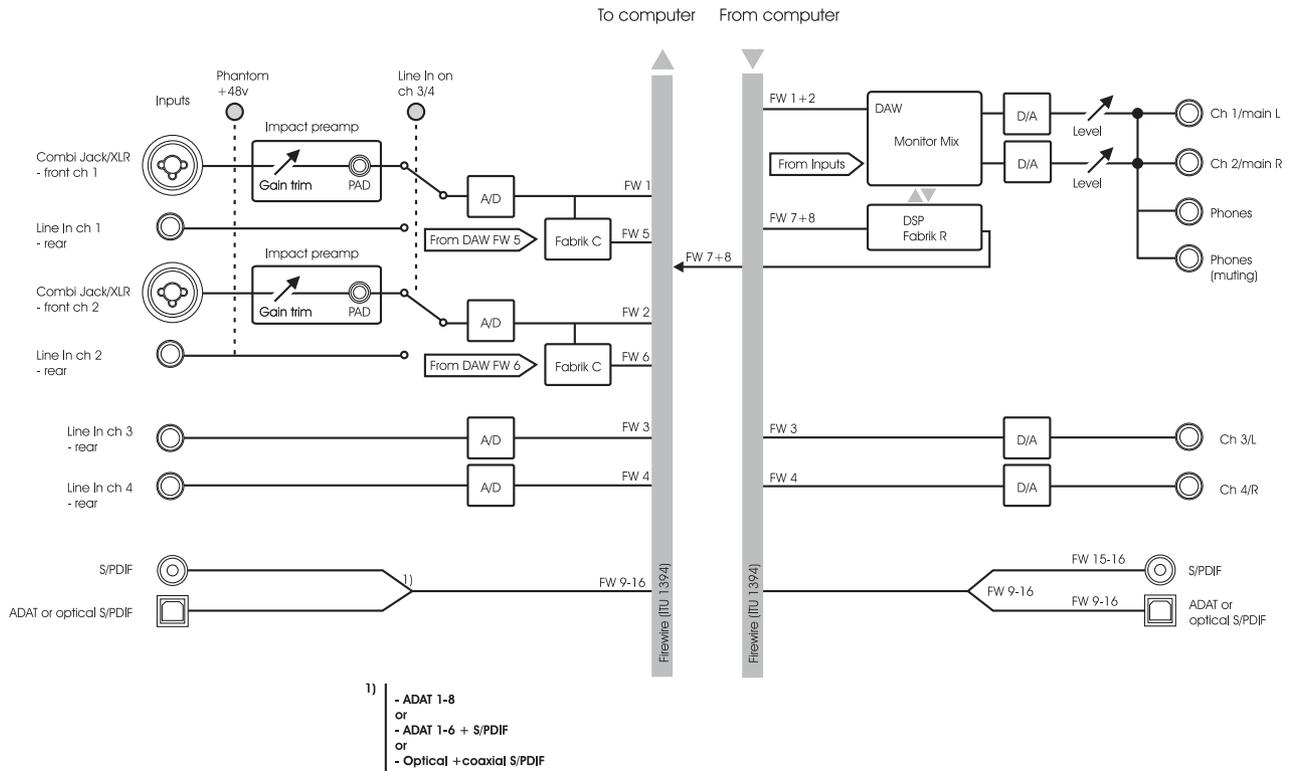

APPENDIX - SIGNAL FLOW KONNEKT 8

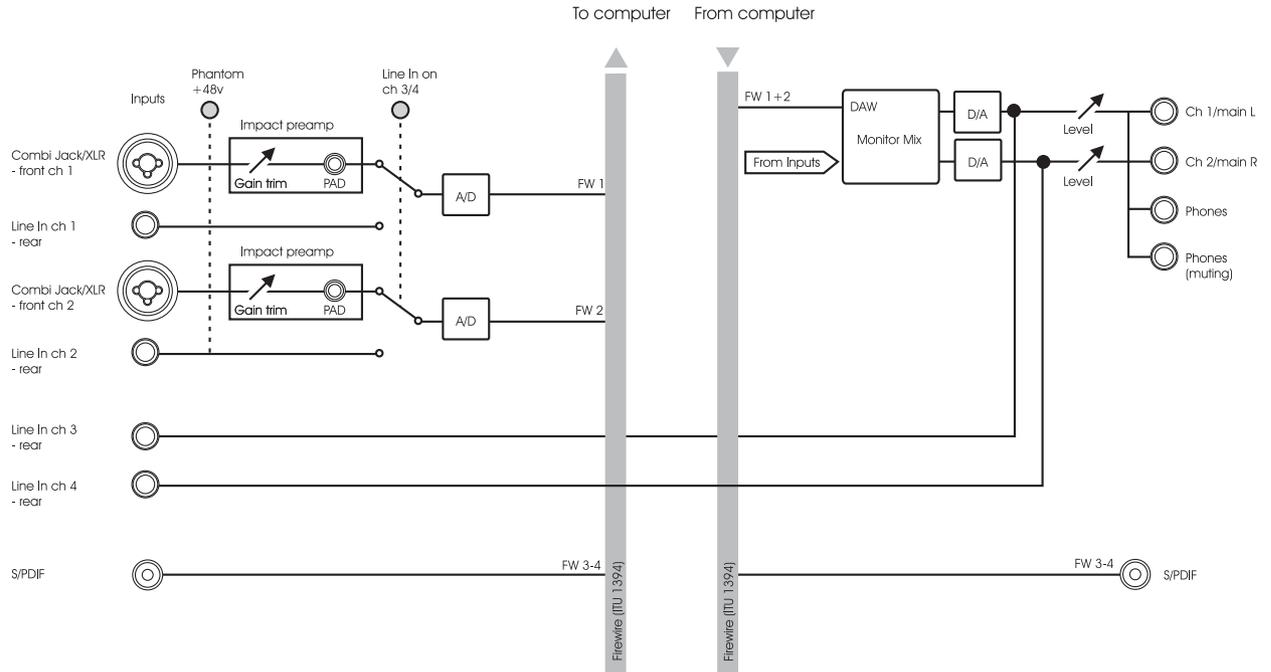

APPENDIX - ASIO CHANNEL NAMES

The following 2 pages describe how the Konnekt ASIO channels distribute according to the selected sample rate.

Konnekt 8

44.1 - 48 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Coaxial L
- 4 Coaxial R

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Coaxial L
- 4 Coaxial R

88.2 - 96 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Coaxial L
- 4 Coaxial R

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Coaxial L
- 4 Coaxial R

176.4 - 192 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Coaxial

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Coaxial

APPENDIX - ASIO CHANNEL NAMES

Konnekt 24D

44.1 - 48 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Line 3 / L
- 4 Line 4 / R
- 5 Fabrik Channel L
- 6 Fabrik Channel R
- 7 Fabrik Reverb L
- 8 Fabrik Reverb R
- 9 ADAT 1 / optical L
- 10 ADAT 2 / optical R
- 11 ADAT 3
- 12 ADAT 4
- 13 ADAT 5
- 14 ADAT 6
- 15 ADAT 7 / Coaxial L
- 16 ADAT 8 / Coaxial R

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Line 3 / L
- 4 Line 4 / R
- 5 Fabrik Channel L
- 6 Fabrik Channel R
- 7 Fabrik Reverb L
- 8 Fabrik Reverb R
- 9 ADAT 1 / optical L
- 10 ADAT 2 / optical R
- 11 ADAT 3
- 12 ADAT 4
- 13 ADAT 5
- 14 ADAT 6
- 15 ADAT 7 / Coaxial L
- 16 ADAT 8 / Coaxial R

88.2 - 96 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Line 3 / L
- 4 Line 4 / R
- 5 Fabrik Channel L
- 6 Fabrik Channel R
- 7 Fabrik Reverb L
- 8 Fabrik Reverb R
- 9 ADAT 1 / optical L
- 10 ADAT 2 / optical R
- 11 ADAT 3
- 12 ADAT 4
- 13
- 14
- 15 Coaxial L
- 16 Coaxial R

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Line 3 / L
- 4 Line 4 / R
- 5 Fabrik Channel L
- 6 Fabrik Channel R
- 7 Fabrik Reverb L
- 8 Fabrik Reverb R
- 9 ADAT 1 / optical L
- 10 ADAT 2 / optical R
- 11 ADAT 3
- 12 ADAT 4
- 13
- 14
- 15 Coaxial L
- 16 Coaxial R

176.4 - 192 kHz

Inputs

- 1 Mic inst / line 1
- 2 Mic inst / line 2
- 3 Line 3 / L
- 4 Line 4 / R
- 5
- 6
- 7
- 8
- 9 Optical
- 10
- 11
- 12
- 13
- 14
- 15 Coaxial
- 16

Outputs

- 1 Line 1 / Main L
- 2 Line 2 / Main R
- 3 Line 3 / L
- 4 Line 4 / R
- 5
- 6
- 7
- 8
- 9 Optical
- 10
- 11
- 12
- 13
- 14
- 15 Coaxial
- 16

APPENDIX - FAQ

TC Near prevents computer standby mode

Before setting your computer in standby mode the TC Near control panel must be shut down. Computers handle standby mode and hibernation in different ways. To prevent instability on the audio interface after the computer is turned back on, the TC Near control panel must be closed. Most likely you will also need to close your host application (Cubase or Logic or ...)

APPENDIX - DICE BACKGROUND

The Konnekts use the brand new TC developed DICE II digital interface chip from TC Applied Technologies. The DICE II chip provides a very stable digital clock to ensure jitter free digital signal flow all the way through the device.

Digital sound quality is not just "digital sound quality": having a stable digital clock is crucial to the sound quality.

Get perfect alignment of all your digital signals
With integrated JET(tm) technology the Konnekt is able to perfectly align all digital signals from external digital sources. This means that all supported digital formats will be aligned to ensure maximal digital quality.

JET - patent pending. Next generation of jitter elimination and sync handling, based on experience from TC flagship System 6000, EQ station and AIR speakers.

DICE II has been specially developed high performing digital interfaces S/PDIF, ADAT, 1394 and AD/DA. DICE II is based on many years of research and experience from making products for the top professional market including studios and broadcast industry.

The DICE II's hardware based FireWire audio streaming engine ensures robust, glitch free performance, independent of how many channels are being streamed.

APPENDIX - TECHNICAL SPECIFICATIONS

Digital Inputs and Outputs

Connector (S/PDIF):	RCA Phono, 75 Ohm
Formats (S/PDIF and TosLink) *1):	S/PDIF (24 bit), IEC 958, Pro-status bits
Connector (ADAT® or TosLink) *2):	Optical Pipe
Format (ADAT®) *3):	8-ch. @ 48 kHz, 4-ch. SMUX @ 96 kHz
FireWire:	IEEE 1394a, S400, IEC 61883
Digital IO Engine:	TC DICE II, handling all IO formats

Clock and Jitter

Internal/External Sample Rates:	44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz
Jitter Rejection Engine:	43 to 193 kHz, jitter rejection at all rates
Jitter Rejection Filter:	JET™ technology in TC DICE II
DIO Interface Jitter:	< -3 dB @ 10 Hz, < -100 dB @ 600 Hz
AD/DA Conversion Jitter:	< 1 ns peak, BW: 700 Hz to 100 kHz
Digital Output Phase (stand alone and across network):	< 42 ps RMS, BW: 100 Hz to 40 kHz
Input Slip Sample Tolerance (all DIs):	< 0.5 % of sample period >+50 % to -50 % of sample period
Processing Delay DIO @ 96/48 kHz:	0.15/0.3 ms
Frequency Response DIO:	DC to 23.9 kHz ± 0.01 dB @ 48 kHz

Line Inputs Ch. 1,2,3,4 *4)

Connectors:	1/4" Phone Jack (balanced)
Impedance, Bal/Unbal:	20 kOhm/25 kOhm
Full Scale Input Level @ 0 dBFS:	+13 dBu
THD+N:	< -100 dB (0.001%) @ 1 kHz, -1 dBFS
SNR:	>111 dB(A), >108 dB, 20 Hz to 20 kHz
Freq. Response:	+0/-0.5 dB, 20 Hz to 20 kHz
Crosstalk:	< -100 dB, 20 Hz to 20 kHz

ADC

A to D Conversion:	24 bit, 128 x oversampling bitstream
A to D Delay:	0.68 ms / 0.63 ms @ 44.1 kHz / 48 kHz

Mic. Inputs Ch. 1,2

Connectors:	Neutrik Combo (XLR)
Sensitivity Full Range Pad on/off:	-10/+10 dBu <> -52/ -32 dBu
Total pre-amp gain:	62 dB
Impedance, Pad on/off:	2000/1300 ohm
NF @ Rg = 150 ohm, Max. Gain:	< 4 dB
EIN @ Rg = 150 ohm, Max. Gain:	< -127 dBu
THD+N, Min. Gain:	< -100 dB (0.001%) @ 1 kHz, -1 dBFS
SNR, Min. Gain:	>109 dB(A), >106 dB, 20 Hz to 20 kHz

Inst. Inputs Ch. 1,2

Connectors:	Neutrik Combo (1/4" Phone Jack)
Sensitivity Range:	-25 dBu <> +17 dBu
Total pre-amp gain:	42 dB
Impedance:	1 Mohm
THD+N, Min. Gain:	< -100 dB (0.001%) @ 1 kHz, -1 dBFS
SNR, Min. Gain:	>107 dB(A), >104 dB, 20 Hz to 20 kHz
Crosstalk:	< -100 dB, 20 Hz to 20 kHz

Notes for Konnekt 8

- *1) S/PDIF only
- *2) Not available
- *3) Not available
- *4) Line 1+2 recordable + AUX 1+2
- *5) Two outputs only

Monitor/Line Outputs Ch. 1,2,3,4 *5)

Connectors:	1/4" Phone Jack. Ground sensing design.
Impedance:	100 Ohm
Level Range (Ch. 1,2):	-40 dBu <> +12 dBu (analog gain scale)
Fixed Full Scale Range (Ch. 3,4):	+12 dBu
THD+N:	< -94 dB (0.002%) @ 1 kHz, -1 dBFS
SNR:	>111 dB(A), >108 dB, 20 Hz to 20 kHz
Freq. Response:	+0/-0.1 dB, 20 Hz to 20 kHz
Crosstalk:	< -100 dB, 20 Hz to 20 kHz

DAC

D to A Conversion:	24 bit, 128 x oversampling bitstream
D to A Delay:	0.70 ms / 0.65 ms @ 44.1 kHz / 48 kHz

Headphones Output (Ch. 1/2)

Connectors:	2 x 1/4" Phone Jack (Stereo)
Impedance:	80 Ohm
Gain Level Range:	-80 dBu <> +16 dBu @ 300 ohm (analog gain scale)
THD+N:	< -94 dB (0.002%) @ 1 kHz, -1 dBFS
SNR:	>103 dB(A), > 100 dB, 20 Hz to 20 kHz
Freq. Response:	+0/-0.1 dB, 20 Hz to 20 kHz
Crosstalk:	< -100 dB, 20 Hz to 20 kHz

Power @ 40 Ohm Load:	200mW
Power @ 600 Ohm Load:	93mW

EMC

Complies With:	EN 55103-1 and EN 55103-2, FCC part 15, Class B, CISPR 22, Class B
----------------	--

Safety

Certified To:	IEC 60065, EN 60065, UL6500 and CSA E60065 CSA FILE #LR108093
---------------	---

Environment

Operating Temperature:	32° F to 122° F (0° C to 50° C)
Storage Temperature:	-22° F to 167° F (-30° C to 70° C)
Humidity:	Max. 90 % non-condensing

Control Interface

MIDI:	In/Out: 5 Pin DIN
FireWire (DAW):	IEEE 1394a, IEC 61883

General

Dimensions:	9.5" x 1.75" x 9" (241.5 x 44 x 226 mm)
Weight:	3.3 lb. (1.5 kg)
Finish:	Acrylic front panel. Plated and coated steel back plate. Anodized aluminum cover.
PPM Meter (Ch. 1,2):	3 LED's pr. channel.
Power Supply (Included)	12V DC, Adapter for 90 to 240 VAC, 50 to 60 Hz (auto select)
FireWire Bus Powered:	8 to 30 VDC
Power Consumption:	<14 W
Warranty Parts and labor:	1 year

Please note: Technical specifications are subject to change without notice.